

TORNADO

Model
HM-300T




Thanks for Choosing Tornado
Hand Mixer

ELARABY

Important Safety Instructions

1. The appliance is designed to process suitable ingredients and is for household use only.
2. Before plugging into a socket, check whether your voltage corresponds to the rating label of the appliance.
3. Don't let the motor unit, cord, or plug get wet.
4. Do not misuse the product. It may cause injury if misuse.
5. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Caution: Only use the double wire beaters or double dough hooks at each operating! Don't use one wire beater and one dough hook at one time!
8. Replace the wire beater and dough hooks respectively if they show any signs of damage.
9. The attachments continue to rotate after being switched off. Wait until the attachments come to a full stop before handling the appliance.
10. Never poke any kitchen utensils such as spoons, knives, etc. into the rotating dough hooks/wire beater and do not reach into the mixing bowl while they are running.
11. Don't let excess cord hang over the edge of the table or worktop or touch hot surface.
12. Never use an extension cord and be careful not to let the power cord come into contact with the rotating dough hooks and wire beaters respectively.
13. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
14. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
15. Children shall not play with the appliance.
16. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
17. Be careful if hot liquid is poured into the food processor as it can be ejected out of the appliance due to a sudden steaming.
18. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other similar working environments;
 - in agricultural working environments;
 - by customers in hotels, motels etc. and similar establishments;
 - in bed-and breakfast type environments.

Parts Name

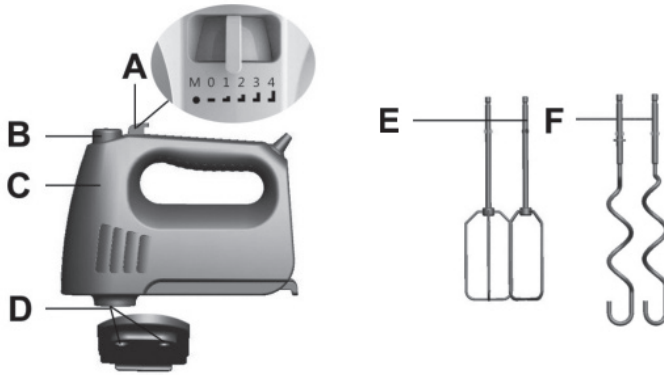

- A. Speed switch (M, 0, 1, 2, 3, 4)
- B. Eject key
- C. Main appliance
- D. Holes
- E. Double beaters
- F. Dough hooks

How to install dough hooks/double beaters




Dough hooks:

1. Insert hook (a) into the bigger hole at the bottom of the hand mixer.
2. And then insert hook (b) into the smaller hole at the bottom of the hand held mixer. Be sure to make the hook (a) and (b) locked in place.
(See above figure)

Caution:

1. Only hook (a) has a marking ring. Don't install the hooks wrongly!

How to install dough hooks/double beaters

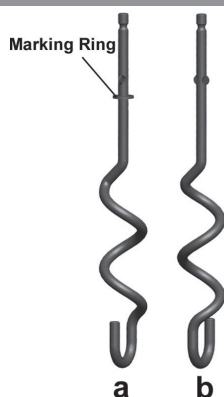

2. It is suitable for kneading the dough, such as the dough for making dumpling, noodles.

3. To remove dough hooks:

Firstly slice the speed switch (A) back to “0”, secondly press “Eject key”.

Double beaters:

Insert the double beaters into the holes at the bottom of the hand held mixer.

Be sure to make the double beaters locked in place. (See above figure)

Caution

1. It is suitable for beating egg white, cream and mayonnaise.

2. To remove the double beaters:

Firstly slice the speed switch (A) back to “0”, secondly press “Eject key”.

How to use Hand Mixer

1. Install the accessory (dough hooks or double beaters) you need on the hand mixer.

2. Add the food in the container.

3. Plug in.

4. Select the speed (M, 1, 2, 3, 4) you need, then appliance starts to process the food.

5. After the food is well processed, remove the hand mixer from the container.

6. Slice the speed switch (A) back to “0”, and then draw out the power cord from the main socket.

7. Take out the food from the container.

Caution:

1. Unplug the appliance from the main socket before you attach or remove the accessories!

2. If you select speed “M” (Turbo), the hand mixer will change speed to the highest speed (speed 4) instantly.

Cleaning

1. Unplug the appliance before cleaning.
2. Clean the appliance only with a damp cloth only.
3. Do not immerse the motor unit and the hand mixer base in water!
4. After use, rinse the accessories right away.
5. When processing food with color, the plastic parts of the appliance may become discolored, wipe these parts with vegetable oil before placing them in the dishwasher.

Processing Guide

Accessory	Food	Maximum	Operation time	Speeds	Preparation
Dough hooks	Flour	1000g	1 minute	1-4	/
	Water	600g			
Double beaters	Egg white	8pcs	5 minutes	3-4	/

Environment friendly disposal

You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal center.



ELARABY



19319



www.elarabygroup.com



Tornado Elaraby