TORNADO

Model TST-HS1000P

Hand Steam Iron OWNER'S MANUAL



Thanks for Choosing Tornado Hand Steam Iron

ELARABY


19319 www.elarabygroup.com

Important Safety Instructions

When using an electric appliance, basic precautions should always be followed, including the following.

- 1. Read all instruction and save these instructions for future reference.
- 2. Verify that the main voltage indicated on the product corresponds with the voltage of your electrical outlet.
- 3. Do not use the appliance if the main cord, plug, light or the appliance itself shows visible damage, or the appliance has been dropped or is leaking. Take it to the nearest authorized service facility or a qualified serviceman for examination and repair in order to avoid a hazard.
- 4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 5. Do not touch the heating parts to avoid being burnt.
- 6. To protect against a risk of electric shock, never immerse the iron in water or other liquids. If this has happened, do not use this appliance any more; dispose of the appliance.
- 7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 8. Children shall not play with the appliance.
- 9. Cleaning and user maintenance shall not be made by children without supervision.
- 10. Care should be taken when using the appliance due to the emission of steam.
- 12. The use of accessory not recommended by manufacturer may cause injury to persons or damage to appliance.
- 13. Do not let cord hang over edge of table or hot surface.
- 14. Burns may occur from touching hot metal parts, hot water, or steam.
- 15. Please do not operate the appliance if there is not enough water in the water tank.
- 16. Never fill the water tank with hot water, scent, vinegar, starch, descaler, fabric softener or other chemical reagent.
- 17. Before plug in or unplug, make sure that the heating element does not touch the surface of the power cord or other objects.
- 18. Never leave the appliance unattended.
- 19. Unplug from outlet when not in use, before filling water or cleaning.
- 20. Grasp the plug to pull out the power cord when unplug the charging base, do not drag the cord.
- 21. Please make the appliance cool down completely before storage.
- 22. Do not use the appliance for other than its intended use.
- 23. Do not use outdoors.
- 24. The appliance must be turned off and cooled down completely before being assembled to avoid scald.

Know Your Gargment Steamer

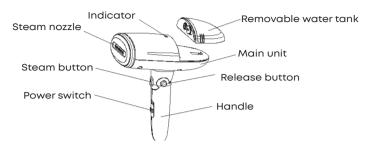

- 1. Main unit: Be used for generating steam for cleaning the clothes.
- 2. Release button: Press and hold the release button to fold the handle; if you fold the handle without holding down release button, the handle will be damaged. If you need to unfold the handle, you can unfold the handle directly without holding down the release button.
- 3.Handle: You can use the handle to control the spraying angle of the steam at will; you can also fold the handle.
- 4. Power switch: When the power cord is connected to the power source, push the power switch to the ON position, and the whole unit will work; push the power switch to the OFF position, and the whole unit will stop working.
- 5. Steam button: Press the steam button after the indicator light is on, the product will spray steam; press the steam button to stop spraying steam.
- 6. Steam nozzle: Use the steam sprayed from the nozzle to care for clothes.
- 7. Indicator light: Connect the power cord to the power supply and push the power switch to the ON state; the indicator light flashes during warm-up. After the warm-up is completed, the indicator light is always on, indicating you can use steam function.
- 8. Removable water tank: The water tank can be removed for filling water, install the water tank well on the main unit after filling water.

Using Your Garment Steamer

Before First Use


- 1. Remove all packaging.
- 2. Install all the accessories according to the installation instructions, fill water tank with max capacity of water, and then iron a piece of waste cloth twice according to the operating

then Iron a piece of waste cloth twice according to the operating instructions. There will be little droplets produced for the first use, and this is normal.

Operating Instructions

NOTE: Before operating, make sure the appliance is unplugged and powered off.

1. Remove the water tank from main unit, then open the water inlet cover.

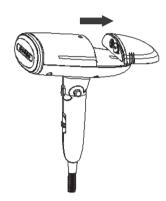

- 2. Fill the water tank with appropriate amount of cold water and then close the water inlet cover.
- 3. Plug in the power, push the power switch to the start-up mode, the indicator flashes, and the unit starts to warm up; once the indicator is always on, you can start to use.
- 4. Thicker clothes or more stubborn wrinkles require more ironing.

For Best Results

Some articles can be steamed better by steaming from the underside. Pants may be steamed holding them by the cuff.

When steaming, touch material lightly with steam nozzle or brush attachment and move up and down to remove wrinkles better. It is important that you make contact with the garment and/or fabric. The Hand-held steamer will not remove stains from garments.

Never steam clothes while wearing them.

The Hand-held steamer works on most fabric, including silk, denim, cotton, polyester and wool.

PLEASE REFER TO LABEL ON ITEM OF CLOTHING TO CHECK IF GARMENT CAN BE STEAMED. IN GENERAL, SOME FABRICS, E.G., LEATHER, SUEDE AND VELVET MAY NOT BE SUITABLE FOR STEAMING.

TO ENSURE YOUR GARMENT IS SUITABEL FOR STEAMING, STEAM A SMALL PART OF THE INSIDE OF THE GARMENT TO TEST THAT IT DOES NOT DAMAGE THE FABRIC BEFORE STEAMING THE ENTIRE GARMENT OR FABRIC.

When go traveling, do not carry the unit base, only carry the main unit for convenient storage.

<u> Maintenance</u>

After use, unplug the garment steamer and allow to cool completely, and empty all water.

1. Never Use Additives

Use of distilled or de-mineralized water will reduce the need to clean your steamer and will prolong its life. However, ordinary tap water may be used as well. Use only water (preferably distilled or de-mineralized-although tap water is okay) in your steam's water tank.

Additives such as cleaning agents, detergents, salt, perfumes and dyes should never be added to the water tank. Some of these substances are highly flammable which could result in bodily harm or death and some additives will corrode or clog internal parts.

After use, clean the residual water and stains on the steam nozzle with a piece of cloth so as to keep the appliance be tidy and extend its service life.

2. Storage

Before storing or packing your garment steamer, empty all water from the unit. Water will go bad with time and may clog internal parts.

Cleaning Mineral Deposit

One common problem that may occur with a steamer is mineral deposit caused by a high content in many municipal water supplies. Mineral residue inside of the internal pipes and heater can cause intermittent steaming or, in some case, no steaming at all.

Note: To reduce or eliminate the occurrence of mineral deposits, we recommend the use of distilled water in the unit. Regular tap water can also be used.

The recommendations that follow can be used to reduce mineral deposits. If not using de-mineralized or distilled water, we recommend you follow the procedure monthly.

- 1. Make sure the unit is unplugged and cooled down.
- 2. Mix a solution of 50% vinegar and 50% water. 2 ounces of this solution will be sufficient.
- 3. Remove the water inlet cover and slowly pour the mixed solution into the water tank and replace the water inlet cover.
- 4. Let stand for 40 minutes.
- 5. Wipe the external shell using the wet cloth.
- Pour clean water in the tank and drain. Repeat this step until the vinegar odor dissipates.
- 6. Reassemble the unit and operate normally.

Environment friendly disposal

You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.



