

TORNADO

Model
TST-HS1200



Thanks For Choosing Tornado
Hand Steam Iron

ELARABY



19319

www.elarabygroup.com



 
Tornado

Important Safety Instructions

When using an electric appliance, basic precautions should always be followed, including the following.

1. Read all instruction and save these instructions for future reference.
2. Verify that the main voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not use the appliance if the main cord, plug, light or the appliance itself shows visible damage, or the appliance has been dropped or is leaking. Take it to the nearest authorized service facility or a qualified serviceman for examination and repair in order to avoid a hazard.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Do not touch the heating parts to avoid being burnt.
6. To protect against a risk of electric shock, never immerse the iron in water or other liquids. If this has happened, do not use this appliance any more; dispose of the appliance.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
8. Children shall not play with the appliance.
9. Cleaning and user maintenance shall not be made by children without supervision.
10. Care should be taken when using the appliance due to the emission of steam.
12. The use of accessory not recommended by manufacturer may cause injury to persons or damage to appliance.
13. Do not let cord hang over edge of table or hot surface.
14. Burns may occur from touching hot metal parts, hot water, or steam.
15. Please do not operate the appliance if there is not enough water in the water tank.
16. Never fill the water tank with hot water, scent, vinegar, starch, descaler, fabric softener or other chemical reagent.
17. Before plug in or unplug, make sure that the heating element does not touch the surface of the power cord or other objects.
18. Never leave the appliance unattended.
19. Unplug from outlet when not in use, before filling water or cleaning.
20. Grasp the plug to pull out the power cord when unplug the charging base, do not drag the cord.
21. Please make the appliance cool down completely before storage.
22. Do not use the appliance for other than its intended use.
23. Do not use outdoors.
24. The appliance must be turned off and cooled down completely before being assembled to avoid scald.

Know Your Steam Brush

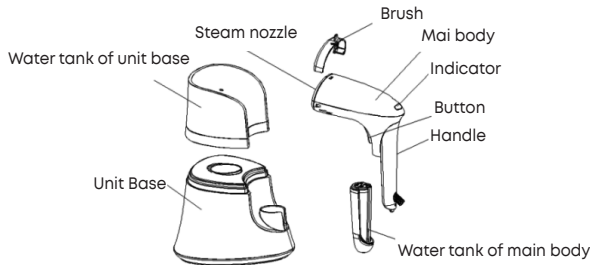

1. Brush Be used for cleaning the stains on the garments such as hair, dust and others.
2. Main body: Be used for producing steam for cleaning the clothes.
3. Indicator: Connect the appliance with power source, the indicator starts to blink, and the steam function can be activated when the indicator lights solidly.
4. Button: When the indicator lights solidly, press down the button, the appliance will spray steam.
5. Handle: The handle is used for controlling the spray angle of the steam.
6. Water tank of main body: The water tank of main body can be removed for filling water, install the water tank well on the main body after filling water.
7. Water tank of unit base: The water tank of unit base can be removed for filling water, install the water tank well on the unit base after filling water.
8. Unit base: Be used for supporting the main body and supplying water for it.
9. Steam nozzle: The garments can be ironed by the steam sprayed out of the steam nozzle.

Before First Use

 
1. Remove all packaging.
2. Install all the accessories according to the installation instructions, fill the water tank with water, and then iron a piece of waste cloth twice according to the operating instructions. There will be little droplets produced for the first use, and this is normal.

Using Your Steam Brush

NOTE: Before operate, make sure the appliance is unplugged and powered off.



1. Remove the water tank of unit base from the unit base, then open the water inlet cover (see Fig.1).

Using Your Steam Brush

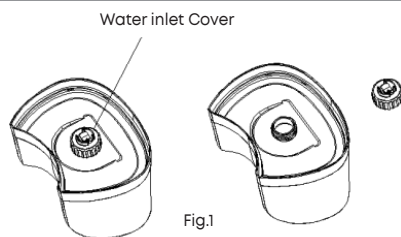

2. Fill the water tank of unit base with appropriate amount of cold water and then close the water inlet cover.

  
3. Put the main body onto the unit base and press the main body downwards, then the unit base will refill the water tank of main body with water automatically (see Fig.2). If the the water tank of main body is not fully filled with water when the appliance is used for the first time, please shake the unit base lightly to exhaust the air in the pipe and then the appliance can be used normally. Please lightly remove the main body from the unit base after finish refilling water. Or remove the water tank of main body from the main body and then open the water inlet cover to fill it with appropriate amount of cold water, after it, replace the water tank of main body onto the main body (see Fig.3).

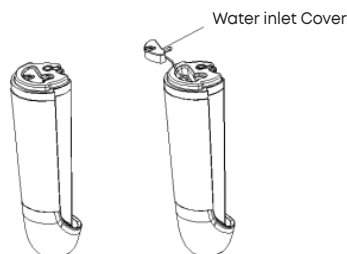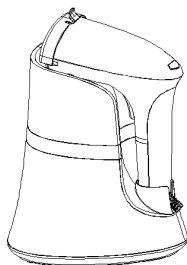

4. Plug in, the indicator blinks and the appliance starts to heat. And the appliance can be ready for operating when the indicator lights solidly.

5. The thicker garment or tougher wrinkles need to be ironed for several times.

 6. Install the brush onto the main body and then you can clean the stains on the garments such as hair, dust and others (see Fig.4).

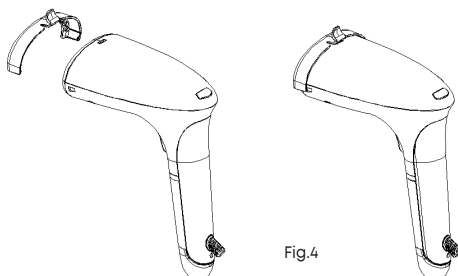

Using Your Steam Brush

5. Do not shake the main body violently during operation (see Fig.5).

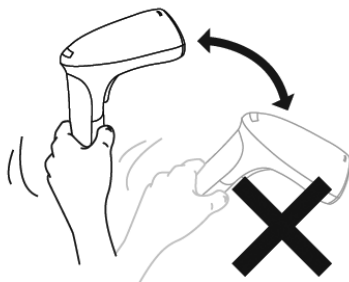 


Fig.5

6. After finish operating, unplug (see Fig.6) and empty the water in the unit base (see Fig.7)

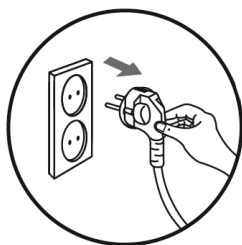 


Fig.6

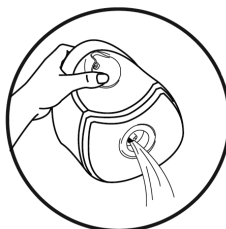 


Fig.7

FOR BEST RESULTS

Some Articles Can Be Steamed Better By Steaming From The Underside.

Pants May Be Steamed Holding Them By The Cuff.

When Steaming, Touch Material Lightly With Steam Nozzle Or Brush Attachment And Move Up And Down To Remove Wrinkles Better. It Is Important That You Make Contact With The Garment And/OR Fabric.

The Hand-Held Steamer Will Not Remove Stains From Garments.

Never Steam Clothes While Wearing Them.

The Hand-Held Steamer Works On Most Fabric, Including Silk, Denim, Cotton, Polyester And Wool.

Please Refer To Label On Item Of Clothing To Check If Garment Can Be Steamed.

In General, Some Fabrics, E.g., Leather, Suede And Velvet May Not Be Suitable For Steaming.

To Ensure Your Garment Is Suitable For Steaming, Steam A Small Part Of The Inside Of The Garment To Test That It Does Not Damage The Fabric Before Steaming The Entire Garment Or Fabric.

When Go Traveling, Do Not Carry The Unit Base, Only Carry The Main Body For Convenient Storage.

Maintenance

After use, unplug the steamer and allow to cool completely, and empty all water.

1. NEVER USE ADDITIVES

Use of distilled or de-mineralized water will reduce the need to clean your steamer and will prolong its life. However, ordinary tap water may be used as well. Use only water (preferably distilled or de-mineralized-although tap water is okay) in your steam's water tank.

Additives such as cleaning agents, detergents, salt, perfumes and dyes should never be added to the water tank. Some of these substances are highly flammable which could result in bodily harm or death and some additives will corrode or clog internal parts.

After use, clean the residual water and stains on the steam nozzle with a piece of cloth so as to keep the appliance be tidy and extend its service life.

2. CLEAN THE SURFACE AND ACCESSORIES

Make the appliance cool down, wipe its surface and the surface of accessories with a piece of damp cloth dipped with mild detergent and then wipe them well. When not using the appliance for a long time, empty the water in the water tank.

3. STORAGE

Before storing or packing your steam brush, empty all water from the unit. Water will go bad with time and may clog internal parts.

Cleaning Mineral Deposit

One common problem that may occur with a steamer is mineral deposit caused by a high content in many municipal water supplies. Mineral residue inside of the internal pipes and heater can cause intermittent steaming or, in some case, no steaming at all.

Note: To reduce or eliminate the occurrence of mineral deposits, we recommend the use of distilled water in the unit. Regular tap water can also be used.

The recommendations that follow can be used to reduce mineral deposits. If not using de-mineralized or distilled water, we recommend you follow the procedure monthly.

1. Make sure the unit is unplugged and cool.
2. Mix a solution of 50% vinegar and 50% water. 50ml of this solution will be sufficient.
3. Remove the water inlet cover and slowly pour and slowly pour the mixed solution into the water tank and replace the water inlet cover.
4. Let stand for 40 minutes.
5. Wipe the external shell using the wet cloth.
5. Pour clean water in the tank and drain. Repeat this step until the vinegar odor dissipates.
6. Reassemble the unit and operate normally.

Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal center.



ELARABY



19319

www.elarabygroup.Com



Tornado
