


# TORNADO

## Owner's Manual

### CHOPPER WITH PLASTIC JAR

Model

**CH-400B**

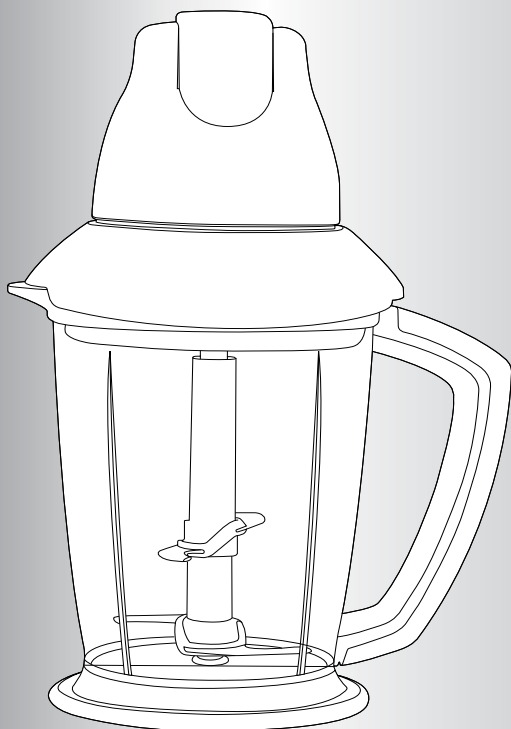


**EL ARABY**  
Since 1964

IssueDate: 1/11/2012





Issue / Review No. : 1/0

ReviewDate: 1/11/2012

## DESCRIPTION OF PARTS

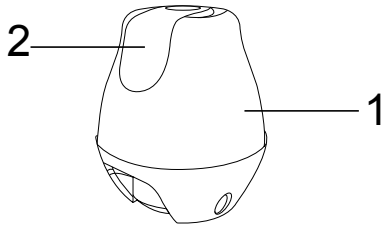

1. POWER UNIT
2. On/Off BUTTON
3. SAFETY LID
- 3a. ANTI SPILL RING
4. UPPER BLADE
5. LOWER BLADE
6. JAR
7. JAR CENTERING PIN
8. NON SLIP RUBBER RING

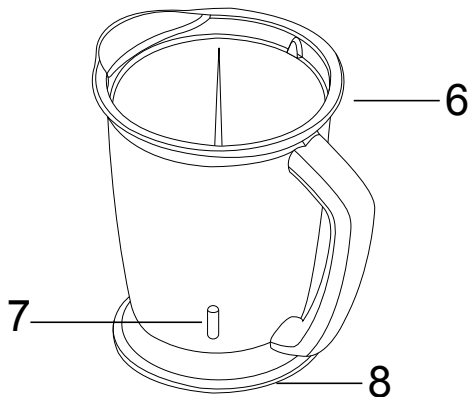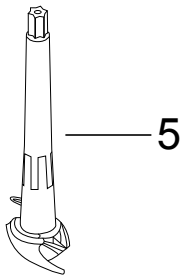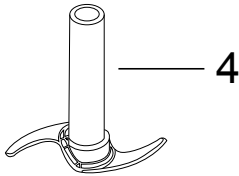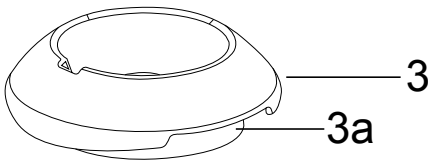

## SAFETY

- Read these instructions carefully before use & keep these instruction for future reference.
- Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity ,any connection error will nulify the guarantee.
- This appliance is not intended for use by persons (including children) with reduced physical,sensory or metal capability.
- Do not place the appliance near any heat source which could cause damage.
- Use the appliance on a stable work surface away from water.
- Do not take off the safety cover before the blade has completely stopped turning.
- Take care with the knife as the blades are very sharp.
- Do not use the appliance if the blades are damaged or deteriorated.
- Do not use the appliance if the appliance itself or the cord is damaged.
- All repairs of electrical appliances must only be performed by skilled personnel.Improrer repairs can result in considerable hazards for the user.
- The appliance is intended for domestic use only and it is not designed for commercial use.
- Do not operate the appliance continuously more than 10 seconds.

## INSTRUCTIONS FOR USE

- Put the main blade into the plastic jar,onto the fixed shaft and upper blade onto the main blade.
- Add ingredients.
- Fit the safety lid in position on the plastic jar.
- Put the power unit on the plate fitted plastic jar. Press down to start.
- For high quality of chopping use pulse function, when the ingredints stick on the jar use a spatula and run the appliance 2 or 3 times using pulse function.

**ATTENTION: DO NOT OPERATE THE APPLIANCE WHEN EMPTY.**

## CHOPPING AND MIXING IDEAS

### Chopping with the blade

Ingredients	Max. Quantity	Max. Time
Parsley	70 g	10 sec/pulses
Carrot	400 g	10 sec/pulses
Tomato( cut into 6 pcs.)	650 g	10 sec
Fruit( cleaned&cut into 8 pcs.)	500 g	10 sec/pulses
Beef ( diced)	300 g	10 sec
Onions( cut into 8 pcs.)	200 g	5-10 sec/pulses
Hazelnut	300 g	5-10 sec

### Liquidising with the blade

Airan	400 g water + 400 g yogurt	10 sec
Soup	700 g	10 sec
Puree for baby	500 g	10 sec
Milk with Banana	500 g milk+ 2 pcs. banana	10 sec

## CLEANING

Do not immerse the power unit into the water.Clean it with damp sponge.



# TORNADO