

TORNADO



شكراً لاختيارك كبة - تورنيدو

موديل
CH-300TT

دليل التشغيل
كبة

هذه العلامة توريدو هي علامة تجارية مسجلة خاصة بشركة العربى

ELARABY



19319

www.elarabygroup.com



Tornado

إجراءات وقائية مهمة


- اقرأ التعليمات بتمعن قبل الاستخدام؛
- افتح الغطاء بعد توقف الشفرة عن الدوران؛
- لا يمكن استخدام محرك المنتج في أغراض أخرى؛
- قبل تنظيف المنتج، يرجى التأكد من فصل سلك الكهرباء؛ بعد انخفاض درجة الحرارة إلى درجة الحرارة الطبيعية، يمكن فك المكونات أو تنظيفها؛
- تأكد من عدم تدلي سلك الكهرباء من حافة الطاولة أو المنضدة أو على سطح الأجزاء الساخنة؛
- لا تضع الجهاز في أو بالقرب من مواقد الغاز، أو مواقد الحث الحراري أو الأفران الساخنة وما إلى ذلك؛
- يجب عدم ملامسة اليد أو أدوات المائدة للشفرة أثناء تقطيع الطعام لتجنب حدوث خطر يهدد سلامتك، مما يؤدي إلى حدوث إصابات شخصية أو تلف المنتج؛ إذا تطلب الأمر استخدام كاشطة، فيجب إيقاف المنتج قبل استخدامها.
- لا تغمر سلك الكهرباء، والقابس والمحرك في الماء أو السوائل الأخرى لتجنب مخاطر نشوب حريق، أو تسرب كهربائي أو إصابات شخصية.
- في حالة تشغيل الطفل للجهاز أو قربه من مكان استخدام هذا المنتج، يجب على الوالدين التوجيه والإشراف؛
- هذا المنتج ليس لعبة ولا يمكن اللعب به؛
- تجنب ملامسة الأجزاء المتحركة؛
- قد يتسبب استخدام ملحقات غير الموصى بها أو المبيعة من قبل الشركة المصنعة الأصلية في حدوث حريق، صدمات كهربائية أو إصابات شخصية.
- في حالة تلف سلك الكهرباء، أو القابس أو وجود خلل في الوحدة، يرجى التوقف عن استخدامها وإرسال المنتج إلى مركز خدمة معتمد قريب منك للاختبار والصيانة؛
- يجب استخدام هذا الجهاز وفقًا للتعليمات، ويجب عدم استخدامه في أغراض أخرى؛
- تأكد من أن الوحدة الرئيسية مثبتة بإحكام قبل الاستخدام؛
- لا تحاول فك قفل الأمان بالغطاء؛
- لا تستخدم هذا المنتج خارج المنزل؛
- يرجى الاحتفاظ بهذا الدليل؛

إجراءات وقائية مهمة

تحذير

- بعد فرم الطعام، يجب فك تركيبة الشفرات قبل تجهيز الطعام المفروم. تذكر أنه لا يمكن تجهيز الطعام يدويًا حتى تفك تركيبة الشفرات.
- لا تفتح الغطاء حتى تتوقف الشفرة عن الدوران.
- يمكن استخدام تركيبة الشفرات فقط لفرم الطعام في أوعية الفرم ويجب عدم استخدامها لأغراض أخرى؛
- هذه الوحدة معدة للاستخدام المنزلي اليومي فقط.

تعرف على أجزاء المفرمة

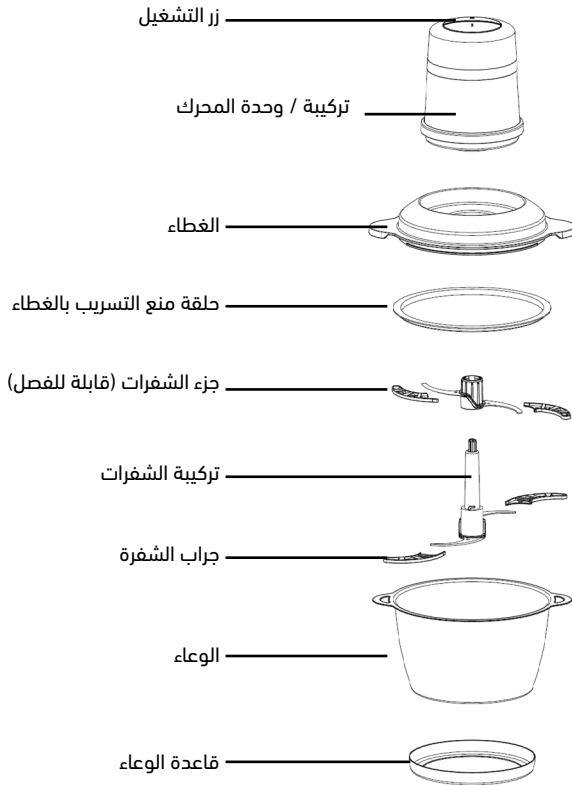

قبل استخدام المنتج لأول مرة

قبل استخدام هذا المنتج لأول مرة.

قم بتنظيف وعاء الفرغ، وغطاء الوعاء ومجموعة الشفرات بالصابون وجففها جيدًا؛ يمكن تنظيف غطاء الوعاء، وتركيبية الشفرات في غسالة الأطباق؛ ولتنظيف المحرك؛ استخدم قطعة قماش مبللة. امسحه، لا تغمره في الماء للتنظيف.

طريقة فرم الطعام

1. ضع وعاء الفرغ على المنضدة أو أي سطح مستوٍ آخر (ضع قاعدة الوعاء)، ثم انزع تركيبية الشفرات من غطاء الشفرات وقم بتثبيتها بالعمود أسفل الوعاء؛ احرص على عدم لمس الشفرة لأنها حادة للغاية.
 2. ضع الطعام في الوعاء، يرجى الرجوع إلى دليل الفرغ للحصول على أفضل نتيجة.
 3. استخدم الغطاء للغطاية ثم ضع الوحدة الرئيسية في الوضع المقابل للغطاء، وسوف يتطابق النتوء الموجود بالغطاء مع الفتحة الصغيرة بالوحدة الرئيسية. اضبط الوضع وفقًا لعلامة القفل بالوحدة الرئيسية والغطاء حتى تقفل الوحدة الرئيسية بإحكام.
 4. اضغط مع الاستمرار على زر التشغيل للفرغ.
- ملحوظة: هذا المنتج مزود بزر النبضات، تجنب تشغيل الجهاز بشكل مستمر لأكثر من ٣٠ ثانية. كلما طالت مدة التشغيل المستمر، كلما كان ملمس الطعام أكثر نعومة، ويتطلب الحصول على طعام خشن، التشغيل لوقت قصير.
5. تأكد من توقف الشفرة تمامًا قبل فتح غطاء الوعاء، افصل سلك الكهرباء، امسك الوحدة الرئيسية، ثم أمسك الدعامة البلاستيكية بتركيبية الشفرات، ارفع تركيبية الشفرات، وامسك الوعاء الزجاجي لصب الطعام منه.
- ملحوظة: يرجى عدم استخدام وعاء الفرغ لتخزين الطعام!


التنظيف والصيانة

- يجب إيقاف تشغيل الجهاز قبل التنظيف.
- بعد الاستخدام، يرجى تنظيف وعاء الفرغ، وغطاء الوعاء وتركيبية الشفرات بالماء الدافئ / الصابون / غسالة الأطباق على الفور؛ قم بتنظيف الوحدة الرئيسية بقطعة قماش مبللة، ويجب عدم غمر الوحدة الرئيسية في الماء.
- ملحوظة: عند تنظيف الشفرات، لا يمكن لمس الشفرة باليد مباشرة ويمكن تنظيفها بواسطة أداة تنظيف مثل فرشاة الأسنان. لا تستخدم مواد كيميائية، أو فولاذية، أو خشبية أو مواد خشنة لتنظيف المنتج، وإلا سيتسبب ذلك في تلف لمعان سطح المنتج.

دليل فرم الطعام

نوع الطعام	دليل التشغيل
الخبز	تقطع كمية مناسبة من الخبز إلى قطع صغيرة، ويوصى باستخدام النبز بالسرعة ١ للفرم، والتشغيل لمدة ١٠ ثوانٍ، وراحة لمدة دقيقة واحدة للدورة الواحدة، والتشغيل عدة دورات حتى تحصل على تأثير الفرمة المطلوب؛
فواكه وخضروات (معلبة أو مطهية)	ضع ما يصل إلى ٥٠٠ جرام من الطعام، يوصى باستخدام النبز بالسرعة ١ للفرم، والعمل لمدة ١٠ ثوانٍ، وراحة لمدة دقيقة واحدة للدورة الواحدة، والتشغيل عدة دورات حتى تحصل على القوام السميك المطلوب؛
كرفس طازج والورقيات الأخرى	ضع كمية مناسبة من الورقيات ويتم تنظيفها وتجفيفها جيدًا، ويوصى باستخدام النبز بالسرعة ١ للفرم، والعمل لمدة ١٠ ثوانٍ، وراحة لمدة دقيقة واحدة للدورة الواحدة، والتشغيل عدة دورات حتى تحصل على تأثير الفرمة المطلوب؛
المكسرات	ضع ما يصل إلى ٢٥٠ جرام من المكسرات، يوصى باستخدام النبز بالسرعة ٢ للفرم، والعمل لمدة ١٠ ثوانٍ، وراحة لمدة دقيقة واحدة للدورة الواحدة، والتشغيل عدة دورات حتى تحصل على القوام السميك المطلوب؛
الكوكيز، والبسكويت	ضع ما يصل إلى ٣٠٠ جرام من الطعام، يوصى باستخدام النبز بالسرعة ٢ للفرم، والعمل لمدة ١٠ ثوانٍ، وراحة لمدة دقيقة واحدة للدورة الواحدة، والتشغيل عدة دورات حتى تحصل على القوام السميك المطلوب؛
اللحم البقري / لحم الخنزير الطازج يقطع إلى قطع بحجم ٦٠مم*٢٠مم*٢٠مم	ضع ما يصل إلى ٢٣٠ جرام من اللحوم، يوصى باستخدام النبز بالسرعة ٢ للفرم، والعمل لمدة ١٠ ثوانٍ، وراحة لمدة دقيقة واحدة للدورة الواحدة، والتشغيل عدة دورات حتى تحصل على القوام السميك المطلوب؛

التخلص من الجهاز الصديق للبيئة

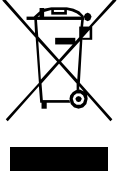

يمكنك المساعدة في حماية البيئة!
يرجى تذكر احترام القوانين المحلية: تُسلم الأجهزة الكهربائية
التي لا تعمل إلى مركز التخلص من النفايات المناسب.

Environment friendly disposal

You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal center.



ELARABY

 **19319**  www.elarabygroup.Com
Tornado

Cleaning and maintenance

Food type	Operation guide
Bread	Shred proper amount of bread into small pieces, it is recommended to use speed1 pulse to chop, work for 10 seconds, rest for 1 minute for one cycle, and perform several cycles of operation until a satisfactory chopping effect is achieved;
Fruits and Vegetables (canned, cooked)	Put up to 500g of food, it is recommended to use speed1 pulse to chop, work for 10 seconds, rest for 1 minute for one cycle, and perform several cycles of operation until a satisfactory thick slurry effect is achieved;
Fresh celery and other leafy plants	Put a proper amount of food to be thoroughly cleaned and dry, it is recommended to use speed1 pulse to chop, work for 10 seconds, rest for 1 minute for one cycle, and perform several cycles of operation until a satisfactory chopping effect is achieved;
Nut	Put up to 250g of food, it is recommended to use speed2 pulse to chop, work for 10 seconds, rest for 1 minute for one cycle, and perform several cycles of operation until a satisfactory thick slurry effect is achieved;
Cookies, cookies	Put up to 300g of food, it is recommended to use speed2 pulse to chop, work for 10 seconds, rest for 1 minute for one cycle, and perform several cycles of operation until a satisfactory thick slurry effect is achieved;
Fresh beef/ pork Cut into 60mm*20mm*20mm size block	Put up to 230g of food, it is recommended to use speed2 pulse to chop, work for 10 seconds, rest for 1 minute for one cycle, and perform several cycles of operation until a satisfactory thick slurry effect is achieved;

Before the first use

Before using this product for the first time, clean the chopped bowl, bowl lid and blade assembly with soap and dry thoroughly; the bowl lid and blade assembly can be cleaned in a dishwasher; the motor uses a damp cloth. Wipe, do not immerse in water for cleaning;

How to chop food

1. Place the chopped bowl on the counter or other flat surface (place the bowl mat), then remove the blade assembly from the blade cover and install it on the shaft at the bottom of the bowl; be careful not to touch the blade as it is very sharp .
2. Put the food in the bowl, please refer to the chopping guide to get the best food condition.
3. Cover the lid and then place the main unit on the corresponding position of the lid The bump on the lid will match the small hole on the main unit. Adjust the position according to the lock mark on the main unit and the lid until the main unit is locked.
4. Press and hold the switch button to chop.

Note: This product is equipped with a pulse button, please avoid the machine running continuously for more than 30 seconds. The longer the continuous operation, the finer the texture of the food, and the short-time work is required for obtaining coarse food.

5. Make sure the blade is completely stopped before opening the bowl lid, unplug the power cord, pick up the main unit, then grasp the plastic bracket portion of the blade assembly, lift the blade assembly, and pick up the glass bowl to pour out the food inside.

Note: Please do not use this chopped bowl for food storage!

Cleaning and maintenance

Keep the product power off before cleaning.

After use, please clean the chopping bowl, bowl lid and blade assembly with warm water/soap/dishwasher immediately; clean the main unit with a damp cloth, the main unit should not be immersed in water.

Note: When cleaning the blade, the hand cannot be directly touched by the blade and can be cleaned by a cleaning tool such as a toothbrush. Do not use chemicals, steel, wood or rough materials to clean the product, otherwise it will damage the surface gloss of the product.


Important Safety Instructions

warning

After the food is chopped, the blade assembly must be removed before Processing the chopped food. Remember that the food cannot be processed by hand until the blade assembly is removed.

- Do not open the lid until the blade stops rotating.
- The blade assembly can only be used for chopping food in chopping bowls and should not be used for other purposes;
- This unit is only for daily household use;

Know your Copper

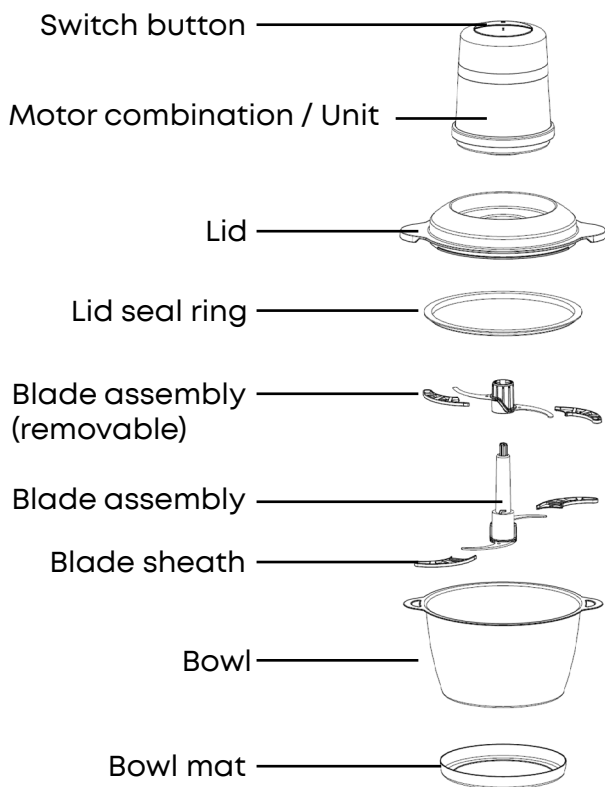

Important Safety Instructions

- Read the instructions carefully before use;
- Open the lid after the blade stops rotating;
- The motor of the product cannot be used for other purposes;
- Before cleaning the product, please make sure to unplug the power cord; After the temperature drops to normal temperature, the components can be removed or cleaned;
- Ensure that the power cord is not hung from the edge of the table or counter, or to the surface of hot parts;
- Do not place in or near gas stoves, induction cookers, hot ovens, etc.;
- Hand or tableware should not be in contact with the blade during chopping of food to avoid a safety hazard, resulting in personal injury or damage to the product; if a scraper is required, the product must be stopped before it can be used.
- Do not soak the power cord, plug, and motor in water or other liquids to avoid the risk of fire, electric leakage or personal injury.
- If the child is operated or close to the use of this product, parents must accompany the guidance and supervision;
- This product is not a children's toy and cannot be played;
- Avoid contact with moving parts;
- Use of accessories not recommended or sold by the original manufacturer may cause risks such as fire, electric leakage or personal injury;
- If the power cord, plug is damaged or the unit is faulty, please stop using it and send the product to a nearby authorized service provider for testing and maintenance;
- This equipment must be used in accordance with the instructions, and should not be used for other purposes;
- Make sure the main unit is firmly fixed before use;
- Do not attempt to shield the safety interlock of the lid;
- Do not use this product outdoors;
- Please save this manual;

TORNADO

Model
CH-300TT



Thanks for Choosing Tornado
Chopper

ELARABY



19319

www.elarabygroup.com

fi Tornado