

TORNADO



موديل
CJ-30T

شكراً لإختيارك عصارة الموالح - تورنيدو

عصارة الموالح
دليل التشغيل

ELARABY



19319

www.elarabygroup.com


Tornado

إجراءات وقائية مهمة

قبل استخدام الجهاز الكهربائي، يجب اتباع احتياطات الأمان الرئيسية التالية، والتي تتضمن ما يلي:

١. قراءة كافة التعليمات قبل الاستخدام.
٢. قبل الاستخدام، تأكد من أن فولتية التيار الكهربائي لديك مطابقة لتلك الموضحة على بطاقة الجهاز.
٣. للحماية من خطر حدوث صدمة كهربائية، لا تضع وحدة المحرك في المياه أو في سائل آخر.
٤. افصل الجهاز من منفذ التيار الكهربائي عندما لا يكون قيد التشغيل، وقبل تركيب أو فك الأجزاء وقبل التنظيف.
٥. لا تقم بتشغيل أي جهاز باستخدام سلك تالف أو بعد تعطل الجهاز، أو سقوطه أو تلفه بأي شكل من الأشكال. أعد الجهاز إلى أقرب مركز خدمة للفحص، والإصلاح أو الضبط الكهربائي أو الميكانيكي.
٦. قد يتسبب استخدام المرفقات التي لا توصي بها أو تبيعها الشركة المصنعة في نشوب حريق، أو صدمة كهربائية أو إصابات.
٧. ضع الجهاز على سطح مستوي. لا تضع الجهاز على أو بالقرب من فرن غاز، أو موقد كهربائي أو فرن ساخن.
٨. لا تدع السلك يتدلى من حافة طاولة أو منصدة.
٩. إن مراقبة الجهاز عن كثب أمرًا ضروريًا في حالة استخدام الأطفال للجهاز أو استخدامه بالقرب منهم.
١٠. لا تستخدم الجهاز في غير الأغراض المخصصة.
١١. يمكن استخدام الجهاز لعصر الموالح فقط، لا تستخدمه في عصر أي نوع آخر من الفواكه.
١٢. لا يمكن للأشخاص الذين يعانون من قدرات بدنية، أو حسية أو عقلية منخفضة أو من تنقصهم الخبرة أو المعرفة استخدام هذا الجهاز، إلا إذا كانوا تحت إشراف أو إذا حصلوا على تعليمات بشأن استخدام الجهاز بطريقة آمنة وأدركوا المخاطر التي ينطوي عليها استخدام الجهاز من شخص مسؤول عن سلامتهم.
١٣. يجب مراقبة الأطفال للتأكد من أنهم لا يعيثون بالجهاز.
١٤. لا تستخدم الجهاز خارج المنزل.
١٥. احتفظ بهذه التعليمات.
١٦. إن هذا الجهاز معد للاستخدام المنزلي والاستخدامات المماثلة مثل:
 - مناطق مطابخ الموظفين في المحلات التجارية والمكاتب وغيرها من بيئات العمل؛
 - البيوت الريفية؛
 - يستخدمها العملاء في الفنادق، والموتيلات وغيرها من أمثلة البيئات السكنية؛
 - البيئات مثل فنادق المبيت والإفطار.
١٧. تحذير: يحتمل حدوث إصابات نتيجة لسوء الاستخدام.
١٨. افصل الجهاز دائمًا من مصدر الكهرباء في حالة تركه دون رقابة وقبل تركيب أو فك الأجزاء أو التنظيف.
١٩. يمكن أن يستخدم الأطفال من سن ٨ سنوات أو أكبر هذا الجهاز إذا كانوا تحت إشراف أو إذا حصلوا على تعليمات بشأن استخدام الجهاز بطريقة آمنة وأدركوا المخاطر الناجمة عن استخدامه. يجب ألا يقوم الأطفال بإجراءات التنظيف والصيانة إلا إذا كانوا ٨ سنوات أو أكبر وتحت إشراف. احفظ الجهاز والسلك بعيدًا عن متناول الأطفال أقل من ٨ سنوات.

تعرف على أجزاء عصارة الفواكه

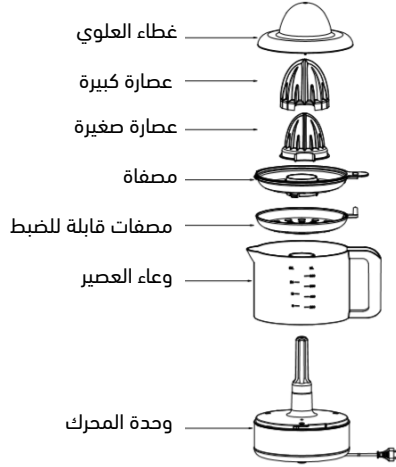

استخدام العصارة

- قبل استخدام العصارة للمرة الأولى، قم بتنظيف كل من الغطاء العلوي، والعصارة، والمصفاة والكوب جيدًا بالماء الدافئ.
١. ضع الكوب على القاعدة، ثم ركب المصفاة بالعمود، وبعد تركيب العصارة بالعمود، قم بتركيب العصارة بالترتيب.
٢. قطع الفاكهة إلى نصفين، ضع الفاكهة على العصارة واضغط برفق وسيبدأ تشغيل المحرك. سيتدفق العصير المستخرج إلى الكوب من خلال المصفاة، ويبقى لب الثمار الخشن واللباب بالمصفاة. قد يدور المحرك في اتجاه مختلف.
- تحذير: لا تستخدم القوة المفرطة عند الضغط على الفاكهة لمنع انسداد وإتلاف المحرك.
٣. بمجرد الانتهاء من العصر، اترك يدك من على العصارة وسيوقف المحرك عن العمل. وسيكون الجهاز في حالة خمول، يمكنك إعادة تشغيله مرة أخرى في أي وقت بالضغط على العصارة لأسفل.
٤. بعد استخراج العصير، قم أولاً بإبعاد العصارة، ثم اسكب العصير.
- تحذير: يجب تشغيل الجهاز ١٥ ثانية، وتوقف ١٥ ثانية، وبعد ١٠ دورات متتالية، يجب تبريد الجهاز لمدة ٣٠ دقيقة.
- ملحوظة: السعة القصوى للكوب هي ٠,٨ لتر. تأكد من عدم ملء الكوب أكثر من اللازم.
٥. عند اكتمال التشغيل أو عدم استخدام الجهاز، افصل الجهاز من الكهرباء.
٦. في حالة وضع العصير في الكوب، تأكد من أن الغطاء العلوي في مكانه. للحفاظ على النظافة والصحة، لا تضع العصير في الكوب لفترة طويلة.
- تحذير: في حالة عدم استخدام العصارة، لا تمسك أبدًا سنون القابس أثناء دوران المصفاة يدك لأن هذا قد يؤدي إلى حدوث صدمة كهربائية.

التنظيف والصيانة

١. افصل الجهاز من الكهرباء وانتظر حتى يبرد تمامًا قبل التنظيف.
٢. قم بتنظيف الفلتر، والعصارة والكوب في ماء ساخن وصابون. ثم اشطفهم بالماء الجاري وامسحهم حتى يجفوا.
٣. تحذير: لا تقم أبدًا باستخدام ملمع المعادن ولا تضع العصارة في غسالة الأطباق للتنظيف. امسح محور الدوران بقطعة قماش ناعمة ومبللة، ولا تغمر قاعدة الكهرباء في الماء أو أي سائل آخر.
٤. قم بتركيب كافة الأجزاء معًا.

التخلص من الجهاز الصديق للبيئة



يمكنك المساعدة في حماية البيئة!
يرجى تذكر احترام القوانين المحلية: تُسلم الأجهزة الكهربائية
التي لا تعمل إلى مركز التخلص من النفايات المناسب.

Using Your Juicer

the motor stop running. The appliance is in the idle state. You may restart it again at any time by pressing the Reamer down.

4. after extract juice, first put the Reamer away, then pour juice.

Caution: The appliance shall be on 15s, off 15s, and after 10 consecutive cycles, the appliance must be cooled down for 30 minutes.

Note: the max capacity of the cup is 0.8L. Make sure do not overfill the cup.

5. When operating is completed or do not use the appliance, unplug the appliance.

6. If depositing the juice in the cup, make sure the top lid is in place. For remaining clean and sanitation, do not deposit the juice in the cup for long time.

Caution: when juicer is not use, never hold the two pins of plug while turn the Reamer by hand as this may result in electric shock.

Cleaning and Maintenance

1. Unplug the appliance and wait it completely cool down before clean.

2. Filter, Reamer, cup. Clean them in hot, sudsy water. Then rinse under running water and wipe dry.

Caution: never use metal polish for cleaning and do not put into dishwasher to clean.

3. Wipe the rotating axis with a soft, damp cloth, never immersed the power base in water or other liquid.

4. Assemble all parts together.

Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations:
hand in the non-working electrical equipments to an appropriate waste disposal center.



ELARABY

 **19319**  www.elarabygroup.Com
Tornado


Important Safety Instructions

18. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

19. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

Know Your Citrus Juicer

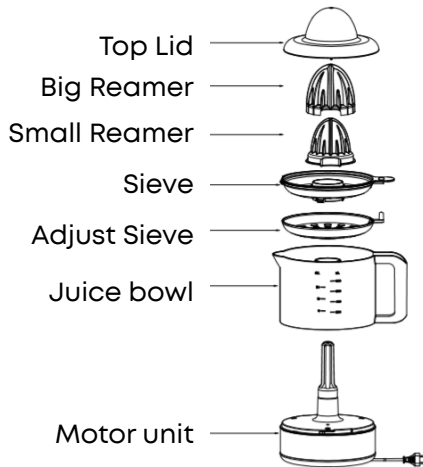

Using Your Juicer

Before the first use, Clean top lid, Reamer, Filter, and cup thoroughly with warm water.

1. place the cup on the base, then assemble the sieve into the spindle cap, after assemble Reamer into the spindle cap, assemble in sequence.

2. Halve the fruit, put the fruit on the Reamer and press it lightly and the motor start running. Then the extracted juice will flow into the cup through the sieve, the roughness flesh and pith will be remained on the sieve. The motor may rotate in different direction.

Caution: Never exert excessive force when pressing the fruit to prevent from blocking and damaging motor.

3. Once completing the squeezing, release the hand from the Reamer and

Important Safety Instructions

Before using the electrical appliance the following basic precautions should always be followed including the following:

1. Read all instructions before using.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
3. To protect against risk of electrical shock do not put the motor unit in water or other liquid.
4. Unplug from outlet when not use, before putting on or taking off parts, and before cleaning.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
6. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
7. Place the appliance on the flat surface. Do not place on or near a hot gas or electric burner, or in a heated oven.
8. Do not let supply cord hang over the edge of table or counter.
9. Close supervision is necessary when the appliance is used by or near children.
10. Do not use appliance for other than intended use.
11. The appliance can only be used to squeeze the citrus fruit, never use it for juicing other kind fruits.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Do not use outdoors.
15. Save these instructions.
16. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
17. Warning: Potential injury from misuse.

TORNADO

Model
CJ-30T



Thanks for Choosing Tornado
Citrus Juicer

ELARABY



19319

www.elarabygroup.com

fi Tornado