

TORNADO



موديل
TRY-2SM

شكراً لاختيارك مكواة كيرلى - تورنيدو

ELARABY



19319

www.elarabygroup.com

Tornado

نشكرك على شراء مكواة تورنادو للشعر (كيرلي). يرجى قراءة هذه التعليمات بعناية لمعرفة كيفية استخدام مكواة الشعر والحفاظ عليها حتى تحصل على أفضل النتائج لسنوات عديدة واحتفظ بها للرجوع إليها فيما بعد.

ملاحظات هامة

- يتوافق هذا الجهاز مع قوانين التكنولوجيا المعترف بها ولوائح السلامة المتعلقة بالأجهزة الكهربائية.
- لا يمكن استبدال كابل الجهاز الرئيسي. في حالة تلف أو تعطل السلك أو القابس.
- يجب تمثيل فولتية مصدر الطاقة الفولتية المحددة بلوحة التقييم.
- قم بتوصيل الجهاز بتيار متردد فقط ومقبس ذو وصلة تأريض. لا تقم بسحب الكابل على الحواف الحادة.
- قم بتثبيتته في مكانه واتركه ليتدلى، حافظ على الكابل بعيداً عن المناطق الساخنة والرطوبة.
- قبل الاستخدام، تحقق من أن الجهاز يعمل بشكل صحيح، يجب عدم استخدام الجهاز في حالة:
 - تلف كابل التوصيل
 - ظهور أعطال ملحوظة بالجهاز
 - تم إسقاط الجهاز
 - لا تقم أبداً بلف الكابل الرئيسي حول الجهاز.
- يجب ألا يلمس الكابل الرئيسي أجزاء الجهاز الساخنة ولا يجب أن يمر الكابل بين ألواح كي الشعر.
- قم بتوصيل قابس الكابل الرئيسي بمصدر الكهرباء عندما لا يكون الجهاز قيد التشغيل.
- يجب عدم تشغيل الجهاز أبداً عندما يكون قفل السفر مغلق. تأكد من أن الجهاز مفتوح.
- لا يدرك الأطفال مخاطر الأجهزة الكهربائية. لذلك من الضروري الإشراف عن كثب عند استخدام الأطفال للجهاز.
- لا تسحب الكابل الرئيسي ولا تحمل الجهاز من الكابل.

تحذير:

أ - خطر الاحتراق بسبب ألواح كي الشعر وأجزاء الجهاز الساخنة.

- لا تمسك الجهاز أبداً من ألواح كي الشعر أو بالقرب منها عندما يكون الجهاز قيد التشغيل. يمكن أن تتسبب ألواح كي الشعر في التعرض للاحتراق. تجنب ملامسة الجلد والعينين. لا تقم أبداً بنقل الجهاز عندما يكون ساخناً.


ب - خطر حدوث صدمة كهربائية.

- لا تستخدم الجهاز أبداً ويذكر مبطلة، أو في المسبح أو في الحمام أو فوق حوض ممتلئ بالمياه. إذا سقط الجهاز في الماء، انزع قابس الكابل الرئيسي على الفور. عند استخدام الجهاز في الحمام، افصله بعد الاستخدام.
- بعد الاستخدام، أو في حالة إيقاف تشغيل الجهاز لفترة طويلة، افصل الجهاز واتركه يبرد.
- حافظ على الجهاز وابعده عن الرطوبة. لا تقم أبداً بوضعه في غسالة الصحون. لا تغمره في المياه أبداً.

ج - خطر الاحتراق نتيجة استخدام سبراي الشعر.

- وذلك لأن سبراي الشعر قد يسبب الاحتراق عندما يلمس السبراي ألواح كي الشعر.

خصائص المنتج

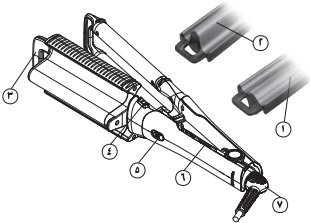

- 1- تجعيد قوى
- 2- تجعيد خفيف
- 3- رأس تبريد للأمان
- 4- زر قفل / فتح للتغيير من التجعيد القوى إلي الضعيف
- 5- قفل سفر للحماية
- 6- مفتاح التحكم في درجات الحرارة
- 7- كابل دوار ٣٦٠°

البيانات الفنية:

- الجهد ٢٤٠-٢٢٠ فولت، التردد ٥٠ هرتز
- طول السلك ١,٨ م
- زر لتغيير درجة الحرارة: ١٦٠ - ١٨٠ - ٢٠٠ °C
- سرعة التسخين واسترداد الحرارة.
- ٦٠ دقيقة للإغلاق التلقائي للأمان.

طريقة الاستخدام

تشغيل الجهاز

- قم بتوصيل الجهاز بمصدر الكهرباء وقم بتشغيل الجهاز وذلك باستخدام مفتاح الضبط القابل للضبط على on. يجب أن يضيء مصباح المؤشر الأحمر.

تحذير:

- خطر احتراق شعرك إذا كانت درجة الحرارة المحددة مرتفعة للغاية
- قم بتحديد درجة الحرارة المناسبة وفقاً لنوع شعرك وذلك باستخدام منظم ضبط درجة الحرارة. فإن تحديد درجة الحرارة على نحو خاطئ أو الاستخدام غير السليم لمكواة الشعر يُعرض شعرك لخطر الجفاف، وفي أسوأ الفروض للاحتراق.
- ملحوظة: يتم الوصول إلى إعدادات درجة الحرارة المرتفعة في بضع ثوانٍ فقط، وتُنخفض إعدادات درجة الحرارة على نحو أبطأ.

ضبط درجة الحرارة:

- ١٦٠ °، ١٨٠ °، ٢٠٠ ° درجة مئوية كحد أقصى.
- إن درجات الحرارة الثلاث لضبط الزر المتحرك، يصحبه المصابيح الملونة المقابلة: يضاء اللون الأصفر والذي يقابل درجة حرارة ١٦٠ °، و يضاء اللون الأخضر والذي يقابل درجة حرارة ١٨٠ °، و يضاء اللون الأحمر والذي يقابل درجة حرارة ٢٠٠ °.

خاصية الوميض:

- عندما تعمل الوحدة، يتحرك الزر المتحرك إلى التغيير المطلوب، في البداية، لا تكون درجة الحرارة مستقرة، وتومض أضواء اللون المقابل. وبعد أن يتوقف، تستقر درجة الحرارة ويمكنك استخدام المكواة.

كي الشعر

- امسك الجهاز .
- قم بتقسيم شعرك إلى جدائل ٤ سم تقريباً.
- امسك الجهاز في يدك.
- ابدأ من الجذور وضع الجداول الباهزة واحدة تلو الأخرى بين ألواح كي الشعر.
- قم بإغلاق الجهاز وارسم تجعيدة الشعر ببطء من الجذور وحتى أطراف شعرك، كرر حتى يُفرد شعرك كما تريد.
- بعد الانتهاء من تصفيف الشعر، اترك شعرك يبرد ثم قومي بتمشيطة.

إيقاف الجهاز

- قم بإيقاف تشغيل الجهاز باستخدام الزر المتحرك بتحريكه إلى الوضع "٠".
- ستوقف الوحدة عن التشغيل تلقائياً بعد ٦٠ دقيقة من آخر مرة قمت بتشغيلها.

الصيانة

- لا يحتاج جهازك إلى أي صيانة. لا تحتاج المكواة إلى تزييت.
- حافظ على نظافة الأجزاء والأسطح الساخنة وخلوها من الشعر، والغبار، والقذورات والمواد الكيميائية (مثل الإسبراي).
- إذا أصبح التنظيف ضرورياً، تذكر أن تقوم بفصل الجهاز عن مصدر الكهرباء واتركه يبرد تماماً على سطح

- مقاوم للحرارة. ثم امسح السطح الخارجي بقطعة قماش (غير مبللة). لا تستخدم المنظفات الحادة، أو الكاشطة أو المنتجات المسببة للتآكل.
- لا تسمح بدخول الماء أو أي سائل آخر إلى مقبض المكواة.
- في حالة التواء السلك أو تشابكه، فقم بفكه قبل الاستخدام.
- تحذير:**
- في حالة حدوث أي خلل، لا تحاول إصلاح المكواة بنفسك حيث لا يوجد بداخله أجزاء يمكن للمستخدم صيانتها.

التخزين

- قبل تخزين الجهاز، اتركه يبرد أولاً.
- يجب وضع الجهاز في مكان آمن، وجاف وبعيد عن متناول الأطفال.
- لا تقم بتخزين هذا الجهاز في درجات حرارة تتجاوز (٦٠°).
- لا تقم أبداً بلف السلك حول الجهاز، وإلا سيُبلَى السلك ويتلف قبل الأوان. تجنب هز السلك أو القابس، أو ثنيهم بشدة، أو لفهم أو شدّهم.
- ضع جهاز فرد الشعر في الحقيبة المقاومة للحرارة لسهولة التخزين وسهولة الحمل. لا تعلق مكواة اليد إلا من حلقة السلك المخصصة.

الضمان

- تضمن شركة العربي الجهاز لمدة عاماً واحد، بدءاً من تاريخ بيع الجهاز للمستخدم النهائي.
- لا يشمل الضمان سوى عيوب المواد المستخدمة أو عيوب التصنيع.
- لا يجب إجراء الصيانة بموجب الضمان إلا في مركز خدمة العربي المعتمد فقط.
- عند تقديم طلب بموجب الضمان، يجب تقديم فاتورة الشراء الأصلية (مع توضيح تاريخ الشراء).
- لا يسري الضمان في الحالات التالية:**
- الاستهلاك الطبيعي للجهاز.
- الاستخدام غير الصحيح، على سبيل المثال التحميل الزائد على الجهاز، والإصلاحات التي قام بها شخص غير مختص من خارج شركة العربي أو استخدام ملحقات غير أصلية.
- التلف الناتج عن تجاهل دليل المستخدم، على سبيل المثال توصيل الجهاز بسلك إمداد غير متوافق مع تعليمات التثبيت.
- فك الأجهزة بشكل كلي أو جزئي.

التخلص الصحيح من هذا المنتج

تشير هذه العلامة إلى أنه لا يجب التخلص من هذا المنتج مع النفايات المنزلية الأخرى لمنع الضرر المحتمل على البيئة أو على صحة الإنسان من التخلص غير السليم للنفايات، تحمل مسؤولية إعادة تدويره لتعزيز إعادة الاستخدام المستدام للأجهزة.



Warranty

- El Araby company provides warranty for 1 year, starting from the date on which the appliance is sold to the end user.
- The warranty only covers defects in material or workmanship.
- The repairs under warranty may only be carried out by El Araby authorized service center.
- when making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.
- **The warranty will not apply in cases of:**
- Normal wear and tear.
- Incorrect use, e.g. overloading of the appliance, repairs that are undertaken by unauthorized person from outside El Araby or use of non-approved accessories.
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply non-compliance with the installation instructions.
- Partially or completely dismantled appliances.

Correct disposal Of This Product



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Maintenance

- Your appliance is virtually maintenance-free. No Lubrication is required.
- Keep heated parts & surfaces clean and free from hair, dust, dirt and chemicals (such as spray).
- If cleaning becomes necessary, remember to disconnect the appliance from the power supply and allow to cool down completely on a heat-resistant surface. Then wipe the exterior with a never wet cloth. Do not use sharp or abrasive detergents or corrosive products. Do not allow water or other liquid to go into the handle of the iron.
- If the cord becomes twisted or tangled, untangle it before use.
- **Warning:**
 - If any malfunction occurs, Do Not attempt to repair it by yourself as there are no user-serviceable parts.

Storage

- Before storing the appliance away, let it cool down first.
- Appliance should be kept at place, which is safe, dry, and out of reach of children.
- Do not store this device in temperatures exceeding (60°C).
- Never wrap the cord around the appliance or the cord will wear and break prematurely. Avoid jerking, bending sharply, twisting or straining the cord or plug.
- Place the Straightener in the heat- resistant pouch for easy storage and portability. Do not hang flat iron up by the cord except from the hanging hook.

How to Use

- **Switching on the appliance:**

- Connect the appliance into the power supply and switch on the appliance using the Adjustable KNOB turn to on. The red indicator light should light up.

- **Warning:**

- Risk of burning your hair if selected temperature is too high:
- Depending on your hair to select the suitable temperature by the temperature control regulator, the wrongly selected temperature or improper use of the hair straightener puts your hair at risk of drying out or in the worst case burning.
- Note: Higher temperature settings are reached in just a few seconds, a reduction of temperature setting take effect more slowly.

- **Temperature setting:**

- 160°C, 180°C, 200°C MAX.
- The three temperatures for the sliding switch control, they are followed by the corresponding color lamps: 160°C corresponding yellow lights display, 180° C corresponding green lights display, and 200°C corresponding red lights display.

- **Flashing function:**

- When the unit is working, then the sliding switch slides the required shift, at the beginning of temperature is not stable, and corresponding color lights is flashing. After it stopped, temperature stabilization and you can use.
- Hold the appliance at the handle, always at a safe distance from skin and eyes. Use a mirror.
- Hold the appliance in the hand.
- Begin at the roots and lay the prepared strands one at a time between the straightening plates.
- Close the appliance and draw the hair curling slowly from the roots through to the tips of your hair. Repeat until your hair is as straight as you desire.
- After finishing styling, let your hair cool down and then comb it through.

- **Switching off the appliance:**

- Switch off the appliance using the sliding switch slides to '0' shift.
- The unit would be auto off after 60 minutes from your last operation.

B- Risk of electric shock


- ⚡ Never use the appliance with wet hands, in the bath or shower or over a filled washbasin. If the appliance falls into the water, remove the main cable plug immediately. When the appliance is used in a bathroom, unplug it after use.
- After use, or if pausing for a significant length of time, unplug it and let the appliance cool down.
- Protect the appliance away from moisture. Never put it into the dishwasher. Never immerse it in water.

C- Risk of burns with hair spray

- Because of hair spray may cause burning when the substance comes into contact with the straightening plates.

Product Features

- 1- Tight curly
- 2- Soft curly
- 3- Cool Tip
- 4- Lock / Unlock buttons
from soft to tight curl
- 5- Travel Lock
- 6- Slide Temperature Switch
- 7- Swivel cable

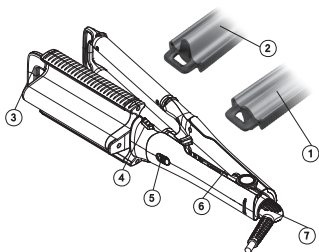

Technic Data:

- Rating 220-240V, 50HZ.
- 1.8M Cable.
- Slide switch temperature: 160 -180 -200°C.
- Quick heat-up and heat recovery.
- Secure 60 minutes auto shut-off.

Thank you for purchasing TORNADO Straightener (Curly). Please read carefully the instructions on how to use and maintain for flat iron so you can get the best results for years to come and Keep them for later reference.

Important Notice

- This appliance complies with the recognized rules of the technology and the pertinent safety regulations for electrical appliance.
- The main cable of this appliance cannot be replaced. If the cord or the plug is damaged or defect.
- The Voltage of the power source must be same as specified on the rating plate.
- Connect the appliance only to AC current and to a socket with earthing contact. Do not pull the cable over sharp edges, clamp it into place or allow it to hang down. Keep the cable away from hot and damp areas.
- Before using check that the appliance functions properly, The appliance should not be used if:
 - The connecting cable is damaged
 - The appliance shows noticeable damage
 - The appliance has been dropped
- Never wind the main cable around the appliance.
- The main cable must not come into contact with hot appliance parts and should never run between the straightening plates.
- Only insert the main cable plug to power supply when the appliance is switched off.
- The appliance must never be switched on when the travel lock is closed. Ensure that the appliance is open.
- Children are not aware of the hazards of electrical appliances. Therefore, close supervision is necessary when the appliance is used by children.
- Do not pull on the main cable and do not carry the appliance by means of the cable.
- **Warning:**

A- Risk of burns from the straightening plates and hot appliance parts

- Never grasp the appliance by or near the straightening plates when the appliance is on. The straightening plates can cause burns. Avoid contact with the skin and eyes. Never transport the appliance when hot.

TORNADO



Model
TRY-2SM

Thanks for Choosing Tornado
Curly Iron

ELARABY



19319

www.elarabygroup.com

Tornado