

TORNADO



موديل
TTM-800

ماكينة شاي ديجيتال
دليل التشغيل

شكراً لاختيارك ماكينة شاي ديجيتال - تورنيديو

هذه العلامة تورنيديو هي علامة تجارية مسجلة خاصة بشركة العربي

ELARABY

19319  elarabygroup.com
TORNADO


إجراءات حماية هامة

- ١) اقرأ كافة الارشادات قبل الاستعمال.
- ٢) قبل توصيل ماكينة عمل الشاى بمصدر الطاقة تأكد من ان الجهد الكهربائى الموضح فى الجهاز يتوافق مع الجهد الكهربائى الموجود فى منزلك , و اذا لم يكن الأمر كذلك اتصل بالموزع ولا تستخدم تستخدم الجهاز .
- ٣) فى حالة تلف سلك الالمداد ,يجب استبداله من قبل الشركة المصنعة ,وكيل الخدمة التابع لها الجهاز او اشخاص مؤهلين و ذلكمن اجل تجنب المخاطر .
- ٤) لا تدع السلك يتدلى على حافة الطاولة اوالمنضدة او يلمس اى سطحنا ساخنا .
- ٥) لا تضع الجهاز على او بالقرب من موقد غاز او موقد كهربائى او اى فرن ساخن .
- ٦) لا تقم بتشغيل الجهاز و هو فارغ لتجنب اتلاف عناصر الحرارة .
- ٧) تأكد من ان جهازصنع الشاى يستخدم على سطح صلب ومستوى بعيدا عن متناول الأطفال ,فهذا سيحمى الغلاية من الانقلاب و يمنع التلف او الاصابة .
- ٨) لتجنب الحرائق ,الصدمات الكهربائىة او الاصابات الشخصية لا تغمر السلك والمقابس الكهربائىة او الغلاية فى الماء او اى سوائل اخرى .
- ٩) اثناء غليان الماء او بعد الغليان الماء مباشرة تجنب ملامسة البخار الخارج من الفوهة.
- ١٠) احرص دائما على صب الماء المغلى بعناية و بطءدون قلب الغلاية بسرعة.
- ١١) توخى الحذر عند اعادة التعبئة عندما يكون جهازصنع الشاى ساخن .
- ١٢) هذا الجهازيمكناستخدامه من قبل الأطفال البالغين ٨ سنوات و اكبر و من قبل الأشخاص الذين لديهم نقص فى القدرات البدنية ,الحسية اوالعقلية و الذين لديهم نقص فى الخبرة و المعرفة اذا تم منحهم الاشراف او التعليمات المتعلقة باستخدام الجهاز بطريقة امنة و فهم المخاطر التى يمكن حدوثها ,لا يجوز للأطفال اللعب بالجهاز,لا تتم عملية التنظيف وصيانة المستخدم من الأطفال الا اذا كانوا اكبر من ٨ سنوات و تحت الاشراف .
- ١٣) يجب الاشراف على الاطفال للتأكد منانهم لا يلعبون بالجهاز .
- ١٤) لا تلمس السطح الساخن استخدم المقبض او الزر.
- ١٥) لايمكن استخدام القاعدة المرفقة لغرض اخر غير المعد لاجله.
- ١٦) يجب توخى الحذر الشديد عند تحريك الجهازوهو يحتوى على الماء الساخن .
- ١٧) الجهاز ليس لعبة ,لا تدع الأطفال يلعبون به .
- ١٨) جهاز صنع الشاى للاستخدام المنزلى فقط ,لا يستخدم فى الهواء الطلق .
- ١٩) لا تقم بفصل الفلتر اثناء الاستخدام العادى لتجنب تسريبه .
- ٢٠) قد يؤدى استخدام الملحقات التى لا توصى بها الشركة المصنعة للجهاز الى نشوب حريق ,صدمات كهربائىة او اصابات شخصية .
- ٢١) افضل الغلاية من مخرج التيار الكهربائى عندما لا تكون قيد الاستخدام و قبل التنظيف ,اترك الغلاية لتبرد قبل تركيب الأجزاء او خلعها , و قبل تنظيف الجهاز .
- ٢٢) افضل الجهاز ,افصل اى عنصر تحكم وضعه فى وضع الديقاف , ثم ازل القابس من مقبس الحائط .
- ٢٣) يجب عدم غمر الجهاز فى السوائل .

إجراءات حماية هامة

- ٢٤) لا تستخدم الجهاز لأى غرض غير المعد لاجله .
- ٢٥) يجب استخدام الغلاية فقط مع الحامل المرفق .
- ٢٦) اذا امتلأت الغلاية اكثر من اللازم يمكن ان يسكب بالماء المغلى .
- ٢٧) تأكد دائما من اغلاق الغطاء و لا ترفعه اثناء غليان الماء .
- ٢٨) هذا الجهاز مخصص للاستخدام المنزلى و التطبيقات المناسبة مثل :
 - مطابخ الموظفين فى التاجر، المكاتب و بيئات العمل الأخرى .
 - تستخدم قبل العملاء فى الفنادق و الموتيلات و غيرها من البيئات السكنية .
 - بيئات المبيت و الافطار الاخرى .
- ٣٠) احفظ هذه التعليمات

اعرف جهاز صنع الشاي الخاص بك

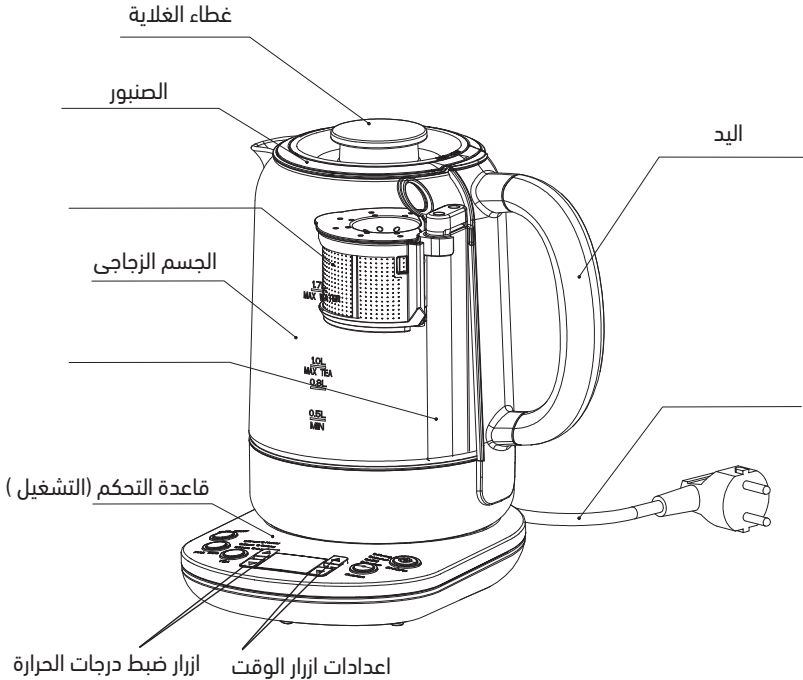

مقدمات للأزرار

١) زر تشغيل / إيقاف

لبدء و انتهاء وضع التشغيل، اثناء التشغيل «زر البءء التلقائى » ، «زرعمل الشاى «و»تحديد درجة الحرارة يكونون غير فعالين، اضغط على زر (الحفاظ على الدفاء) سيدخل الجهاز فى وضع الدفاء، اضغط عليه مرة اخرى للخروج (الغاء)، و يمكنك الضغط على (زر ضبط الوقت) لتحديد وقت التحضير .

٢) زر تحضير الشاى

نوع الشاى و درجات الحرارة المقابلة

الشاى الأخضر : ٨٠ درجة مئوية، يجب ان تكون درجة حرارة الماء للتخمير ٨٠ درجة مئوية + 0 درجات مئوية، درجة حرارة الشاى يجب ان تكون < ٦٠ درجة مئوية .

الشاى الأسود : ١٠٠ درجة مئوية يجب ان تكون درجة حرارة الماء للتخمير ٩٨ درجة مئوية، درجة حرارة الشاى يجب ان تكون < ٦٠ درجة مئوية .

الأبيض : ٨0 درجة مئوية، يجب ان تكون درجة حرارة الماء للتخمير ٨0 درجة مئوية + 0 درجات مئوية، درجة حرارة الشاى يجب ان تكون < ٦٠ درجة مئوية .

الشاى العشبى : ١٠٠ درجة مئوية يجب ان تكون درجة حرارة الماء للتخمير ٩٨ درجة مئوية، درجة حرارة الشاى يجب ان تكون < ٦٠ درجة مئوية .

الشاى الصينى الأسود: ٩٠ درجة مئوية، يجب ان تكون درجة حرارة الماء للتخمير ٩٠ درجة مئوية + 0 درجات مئوية، درجة حرارة الشاى يجب ان تكون < ٦٠ درجة مئوية .

شاى مخصوص : ٧٠-١٠٠ درجة مئوية ، يجب ان تكون درجة حرارة الماء للتخمير <٩٨ درجة مئوية، و الاخر يكون + 0 درجات مئوية من درجات الحرارة المحددة .

٣) الزر المخصص

يتم استخدامه لاختبار قوة(ثقل) الشاى و وقت التحضير المقابل لكل قوة شاى على النحو التالى :

الشاى الأخضر :

ثقيل ٤ دقائق، متوسط ٣ دقائق، خفيف ٢ دقيقة، مخصوص :١٠٠- دقائق

الشاى الأسود:

ثقيل ٣ دقائق، متوسط ٢ دقيقة، خفيف ٢ دقيقة، مخصوص :١٠٠- دقائق

الأبيض:

ثقيل ٤ دقائق، متوسط ٣ دقائق، خفيف ٢ دقيقة، مخصوص :١٠٠- دقائق

الشاى العشبى :

ثقيل 0 دقائق، متوسط ٤ دقائق، خفيف ٣ دقيقة، مخصوص :١٠٠- دقائق

الشاى الصينى الأسود:

ثقيل ٤ دقائق، متوسط ٣ دقائق، خفيف ٢ دقيقة، مخصوص :١٠٠- دقائق

ملحوظة :عندما يكون وقت تحضير الشاى ٠، يتم تشغيل الجهاز تحت وضع تخمير الماء و لن تتحرك سلة تخمير الشاى .

مقدمات للأزرار

٤) زر التشغيل التلقائي

يستخدم لبدء و انتهاء وظيفة التشغيل التلقائي. اضغط على زر (بدء التشغيل التلقائي), سيضىء المؤشر المقابل باللون الأزرق, ويتم تشغيل شاشة و تشير الى (الوقت الحالى) ووقت (البدء التلقائي), ثم اضغط على زر «تشغيل/إيقاف» لتشغيل وظيفة (بدء تلقائي), للخروج من وضع العمل (بدء التشغيل التلقائي), اضغط على أى زر ماعدا زر (تشغيل/إيقاف) او زر (إبقاء الدفء) LCD.

ملحوظة : لا تملأ الماء فوق الحد الأقصى, فقد ينسكب الماء من الفوهة أثناء الغليان .
ملحظة :الجهاز مزود بقاعدة طاقة يمكن تدويرها ٣٦٠ درجة للتشغيل المريح لسلك الطاقة .
قبل استخدام ماكينة عمل الشاي الخاصة بك
إذا كن تستخدم ماكينة عمل الشاي للمرة الأولى, فمن الأفضل ان تقوم بتنظيف ماكينة عمل الشاي الخاصة بك قبل الاستخدام و ذلك بغلى ماء ممتلىء مرتين ثم التخلص من الماء .
ملحوظة:السعة القصوى لتخمير المياه ١,٧ لتر , والسعة القصوى و الحد الأدنى لسعة تحضير الشاي ١,٠ لترو ٠,٥ لتر على التوالي .

وصف الوظيفة

١)تحضير الماء

ضع جسم الغلاية على قاعدة الطاقة, و صلها بمصدر الطاقة, (درجة حرارة التحضير)
المعروضة على شاشة هي ١٠٠ درجة مئوية و (وقت التحضير) هي ٠:٠٠, ومن هنا اضغط على (ازرار ضبط درجة الحرارة) بعد الانتهاء اضغط على زر (تشغيل/إيقاف)يبدأ الجهاز تحضير الماء و يضىء مؤشر (تشغيل/إيقاف) باللون الأزرق, و شاشة ٢٥ درجة مئوية ثم تشير الى درجة حرارة الماء الحالية, عندما تصل درجة الحرارة الى درجة الحرارة المحددة, يمكن سماع صوت صفير , وسيتوقف الجهاز عن العمل, و سوف ينطفئ زر المؤشر (تشغيل/إيقاف) و ستنطفئ شاشة بعد ١٥ ثانية ثم يرجع الجهاز الى وضع الاستعداد.

اضغط على زر(تشغيل/إيقاف) مرة اخرى فى أى وقت أثناء عمل الجهاز, سيتوقف الجهاز عن العمل , و سوف ينطفئ زر المؤشر (تشغيل/إيقاف)و سوف تنطفئ شاشة بعد ١٥ ثانية و سيدخل الجهاز فى وضع الاستعداد.lcd

٢)تحضير الشاي

ضع جسم الغلاية على قاعدة الطاقة, و صلها بمصدر الطاقة, (درجة حرارة التخمير)
المعروضة على شاشة هي ١٠٠ درجة مئوية و (وقت التحضير) هي ٠:٠٠, اضغط على زر (تحضير الشاي

وصف الوظيفة

(لاختيار نوع الشاي الذى ترغب به .هناك خمسة انواع من الشاي بما فيها (الشاي الأخضر ،الأسود،الأبيض ،الشاي العشبي ،الشاي الصينى الأسود،إذا كنت ترغب فى نوع شاي اخر اضغط على زر (مخصص) للتحضير حسب الطلب الخاص بك ثم اضغط على زر (ضبط درجات الحرارة) لضبط وقت التحضير ، و شاشة ستشير الى درجة حرارة التحضير المحددة LCD. بعد الانتهاء من الضبط ، يمكنك الضغط على زر (مخصص) لاختيار ثقل الشاي المرغوب به و هناك اربعة قوات بما فيها (ثقيل ،متوسط ،خفيف ،مخصص).عند ضبط ثقل الشاي ستشير شاشة ضبط وقت التحضير و فى النهاية اضغطعلى زر (تشغيل/ايقاف)الجهاز سيبدأ تحضير الماء و مؤشر زر (ايقاف /تشغيل)سيضىء باللون ازرق و شاشة تشير لولا الى ٢0 درجة مئوية ثم تشير الى درجة حرارةالماء الحالى .عندما تصل درجة الحرارة الى درجة الحرارة المحددة ،ستنزل سلة التحضير فى الماء لتحضير الشاي ، و سيبدأ وقت التحضير فى العد التنازلى .عندما يكوت وقت التحضير ٠، سترتفع سلة التحضير تلقائياً و يمكنك سماع صفير و سيتوقف الجهاز عن العمل ، و سوف ينطفئ زر المؤشر (تشغيل/ايقاف) و ستنطفئ شاشة بعد ١0 ثانية ثم سوف يدخل الجهاز فى وضع الاستعداد . اضغط على زر(تشغيل/ايقاف) مرة اخرى فى اى وقت اثناء عمل الجهاز ،سيتوقف الجهاز عن العمل ، و سوف ينطفئ زر المؤشر (تشغيل/ايقاف)و سوف تنطفئ شاشة بعد ١0 ثانية و سيدخل الجهاز فى وضع الاستعداد.ccd

٣ وظيفة بدء التشغيل التلقائى لتحضير الماء

ضع جسم الغلاية على قاعدة الطاقة ، و صلها بمصدر الطاقة ،(درجة حرارة التحضير) المعروضة على شاشة هى ١٠٠ درجة مئوية و (وقت التحضير) هى ٠:٠٠ ، ومن هنا اضغط على (ازرار ضبط درجة الحرارة) لضبط درجة حرارة التحضير .بعد الانتهاء من الاعداد.اضغط مع الاستمرار فى الضغط على زر (بدء التشغيل التلقائى) و اضغط عليه لمدة ٣ ثوانى و سيضىء مؤشر المقابل باللون الأزرق ، و تشير شاشة الى (الوقت الحالى) و (وقت البدء التلقائى).اضغط على (ازرار ضبط الحرارة) لضبط الوقت الحالى ، و اضغط على (ازرار ضبط الوقت) لضبط وقت البدء التلقائى .الدورة الزمنية ١٢ ساعة .ثم اضغط على زر (تشغيل/ايقاف)للدخول فى وضع بدء التشغيل التلقائى ، بعد ذلك الوقت ، سيظهر مؤشر زر (تشغيل/ايقاف) باللون الأزرق و ستضىء شاشة بقوة ، ويبدء الوقت الحالى فى العد حتى يصل الى وقت البدء التلقائى ثم يبدأالجهاز فى تحضير الماء و الدخول فى وضع الاستعداد بعد الانتهاء من التحضير .lcd LCD

٤ وظيفة بدء التشغيل التلقائى لتحضير الشاي

ضع جسم الغلاية على قاعدة الطاقة ، و صلها بمصدر الطاقة ،(درجة حرارة التحضير) المعروضة على شاشة هى ١٠٠ درجة مئوية و (وقت التحضير) هى ٠:٠٠ ، اضغط على زر (تحضير الشاي

وصف الوظيفة

(لاختيار نوع الشاي الذى ترغب به .هناك خمسة انواع من الشاي بما فيها (الشاي الأخضر ،الأسود،الأبيض ،الشاي العشبي ،الشاي الصينى الأسود،إذا كنت ترغب فى نوع شاي اخر اضغط على زر (مخصص) للتحضير حسب الطلب الخاص بك ثم اضغط على زر (ضبط درجات الحرارة) لضبط وقت التحضير ، و شاشة LCD ستشير الى درجة حرارة التحضير المحددة .بعد الانتهاء من الاعداد ،يمكنك الضغطعلى الزر (مخصص) لتحديد قوة (ثقل) الشاي التى تريدها وهناك اربعة قوات بما فى ذلك(ثقيل ،متوسط ،خفيف ،مخصوص) للاختيار .عند ضبط قوة الشاي ،ستشير شاشة الى وقت التحضير المحدد.بعد تحديد نوع الشاي و وقت التحضير اضغط مع الاستمرار فى الضغط على زر (التشغيل التلقائى)لمدة ٣ ثوانى سيضىء المؤشر المقابل باللون الأزرق. عند ضبط قوة الشاي ، ستشير شاشة LCD إلى وقت التخمير المحدد. بعد تحديد نوع الشاي ووقت التخمير ، اضغط مع الاستمرار على الزر « التشغيل التلقائى » واضغط عليه لمدة ٣ ثوانٍ ، ويضيء المؤشر المقابل باللون الأزرق ، وتشير شاشة LCD إلى «الوقت الحالي» و «وقت البدء التلقائى» ، اضغط «أزرار ضبط درجة الحرارة» لضبط الوقت الحالي ، واضغط على «أزرار ضبط الوقت» لضبط وقت البدء التلقائى. الدورة الزمنية ١٢ ساعة. ثم اضغط على زر «تشغيل/ايقاف» للدخول في وضع التشغيل التلقائى ، في ذلك الوقت ، يضيء مؤشر زر «تشغيل/ايقاف» باللون الأزرق ، وتضيء شاشة LCD بقوة ، ويبدأ الوقت الحالي في العد حتى تصل إلى وقت البدء التلقائى ، يتم تنشيط وظيفة تخمير الشاي وسيدخل الجهاز في وضع الاستعداد بعد الانتهاء من التحضير.

0) حافظ على الدفء

اضغط على زر « حافظ على الدفء » ، ويدخل الجهاز في وضع الاحتفاظ بالحرارة بعد الانتهاء من التخمير ، في ذلك الوقت ، يضيء المؤشر المقابل باللون الأزرق ، ودرجة حرارة الاحتفاظ بالدفء هي ٦٠ ، ووقت الاحتفاظ بالدفء هو ٣٠ دقيقة. إذا تركت الغلاية تعمل عن طريق الخطأ بدون ماء ، فإن الحماية من الغليان والجفاف ستوقف الطاقة تلقائياً. في حالة حدوث ذلك ، اترك الغلاية لتبرد قبل ملؤها بالماء البارد قبل إعادة الغليان

التنظيف والصيانة

افصل الجهاز دائمًا عن مأخذ الطاقة واجعله يبرد تمامًا قبل التنظيف. لا تغمر الغلاية أو قاعدة الطاقة في الماء أو أي سائل آخر لتجنب الصدمة الكهربائية.

١. لا تغمر الغلاية أو سلك الطاقة أو قاعدة الطاقة في الماء مطلقًا ، ولا تدع الرطوبة تتلامس مع هذه الأجزاء.

٢. امسح مظهر غلاية الماء والقاعدة بقطعة قماش أو منظف معتدل ورطب ، ولا تستخدم أبدًا منظفًا أكالًا.

تنبيه: لا تستخدم المنظفات الكيماوية أو المعدنية أو الخشبية أو الكاشطة لتنظيف الجزء الخارجي من الغلاية.

٣. لا تغمر غطاء الغلاية في الماء وامسحه بقطعة قماش مبللة.

٤. يمكن تخزين سلك الطاقة في قاعدة الطاقة عند عدم استخدام الغلاية.

ازالة الرواسب المعدنية

ازالة الرواسب المعدنية

يجب إزالة الترسبات الكلسية من الغلاية بشكل دوري لأن الرواسب المعدنية في مياه الصنبور قد تتشكل قشورًا في قاع الغلاية مما يؤدي إلى تقليل كفاءة العملية. يمكنك استخدام مزيل الترسبات المتوفر تجاريًا واتباع التعليمات الموجودة على عبوة مزيل الترسبات. بدلاً من ذلك ، يمكنك اتباع التعليمات التالية باستخدام الخل الأبيض.

١. املاّ الغلاية بـ ٣ أكواب من الخل الأبيض ، ثم أضف الماء إلى الكمية حتى تغطي قاع الغلاية بالكامل. اترك المحلول في الغلاية طوال الليل.

٢. ثم تخلصي من الخليط في الغلاية ، ثم املئي الغلاية بالماء النظيف وجليها ثم تخلصي من الماء. كرر عدة مرات حتى تزول رائحة الخل. يمكن إزالة أي بقع متبقية داخل الفوهة عن طريق فركها بقطعة قماش مبللة.

التخلص من الجهاز الصديق للبيئة



يمكنك المساعدة في حماية البيئة!
يرجى تذكر احترام القوانين المحلية: تُسلم الأجهزة الكهربائية
التي لا تعمل إلى مركز التخلص من النفايات المناسب.

ELARABY

19319  elarabygroup.com
 **TORNADO**



Environment friendly disposal

You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal center.



Removal Of Mineral Deposits

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle so as to cause the operation less efficiency. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow below instructions using the white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

Boil-Dry Protection

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water before re-boiling.

Cleaning And Maintenance

Always disconnect the appliance from the power outlet and make it cool down completely before cleaning. Never immerse the kettle or power base into the water or other liquid to avoid electric shock.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.

2. Wipe the appearance of water kettle and base with a mild and damp cloth or cleaner, never use a corrosive cleaner.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.

3. Do not immerse the kettle lid into the water and wipe it with a wet cloth.

4. The power cord can be stored at the power base when the kettle is not used.

Function Description

time starts to count up until it reaches the auto-start time, then the appliance will start to brew water and enter into standby mode after finish brewing.

4. AUTO-START FUNCTION FOR BREWING TEA

Put the kettle body on the power base, connect with the power source, the “Brewing temperature” shown in the LCD display is 100°C, and the “Brewing time” is 0:00. Press the “TEA” button to select your desired type of tea. There are 5 types of tea including “Green”, “Black”, “White”, “Herbal” and “Oolong” available. If you need to use other type of tea, press “Custom” button to set according to your demand, then press the “Temperature setting buttons” to set the brewing temperature, and the LCD display will indicate the set brewing temperature. After finish setting, you can press the “Custom” button to select your desired tea strength, and there are 4 strengths including “Strong”, “Medium”, “Mild” and “Custom” for selection. When setting the strength of tea, the LCD display will indicate the set brewing time. After selecting the type of tea and the brewing time, hold and press the “AUTO START” button for 3 seconds, its corresponding indicator illuminates in blue, and the LCD display indicates the “Current time” and “Auto-start time”, press the “Temperature setting buttons” to set the current time, and press the “Time setting buttons” to set the auto-start time. The time cycle is 12 hours. Then press the “ON/OFF” button to enter into the auto-start working mode, at that time, the indicator of the “ON/OFF” button illuminates in blue, the LCD display lights solidly, and the current time starts to count up until it reaches the auto-start time, then the tea-brewing function is activated and the appliance will enter into standby mode after finish brewing.

5. KEEP WARM

Press “Keep Warm” button, the appliance enters into the keep-warm mode after finish brewing, at that time, its corresponding indicator illuminates in blue, the keep-warm temperature is 60°C, and the keep-warm time is 30 minutes.

Function Description

your desired type of tea. There are 5 types of tea including “Green”, “Black”, “White”, “Herbal” and “Oolong” available. If you need to use other type of tea, press “Custom” button to set according to your demand, then press the “Temperature setting buttons” to set the brewing temperature, and the LCD display will indicate the set brewing temperature. After finish setting, you can press the “Custom” button to select your desired tea strength, and there are 4 strengths including “Strong”, “Medium”, “Mild” and “Custom” for selection. When setting the strength of tea, the LCD display will indicate the set brewing time. Finally, press “ON/OFF” button, the appliance starts to brew water and the indicator of “ON/OFF” button illuminates in blue, and the LCD display firstly indicates 25°C and then indicates the current water temperature. When the temperature reaches the set temperature, the brewing basket will go down into the water for brewing the tea, and the brewing time will start to count down. When the brewing time is “0:00”, the brewing basket will go up automatically, a long beep can be heard, the appliance will stop working, the indicator of “ON/OFF” button will turn off and the LCD display will extinguish after 15 seconds, then the appliance will enter into standby mode. Press the “ON/OFF” button again at any time during working, the appliance will stop working, the indicator of “ON/OFF” button will turn off, the LCD display will extinguish after 15 seconds and the appliance will enter into standby mode.

3. AUTO-START FUNCTION FOR BREWING WATER

Put the kettle body on the power base, connect with the power source, the “Brewing temperature” shown in the LCD display is 100°C, and the “Brewing time” is 0:00. At this time, press the “Temperature setting buttons” to set the brewing temperature. After finish setting, hold and press the “AUTO START” button for 3 seconds, its corresponding indicator illuminates in blue, and the LCD display indicates the “Current time” and “Auto-start time”, press the “Temperature setting buttons” to set the current time, and press the “Time setting buttons” to set the auto-start time. The time cycle is 12 hours. Then press the “ON/OFF” button to enter into the auto-start working mode, at that time, the indicator of the “ON/OFF” button illuminates in blue, the LCD display lights solidly, and the current

Introduction For Buttons

Warm” button.

Note: Do not fill the water over the maximum level, as water may spill out of the spout when boiling.

Note: The appliance is equipped with a power base which can be rotated 360°C for the convenient operation of power cord.

Before Using Your Tea Maker

If you are using Tea Maker for the first time, it is recommended that you clean your tea maker before use by brewing a full kettle of water twice and then discarding the water.

NOTE: The maximum capacity for brewing water is 1.7L, and the maximum capacity and minimum capacity for brewing tea is 1.0L and 0.5L respectively.

Function Description

1. BREW WATER

Put the kettle body on the power base, connect with the power source, the “Brewing temperature” shown in the LCD display is 100°C, and the “Brewing time” is 0:00. At this time, press the “Temperature setting buttons” to set the brewing temperature. After finish setting, press “ON/OFF” button, the appliance starts to brew water, the indicator of “ON/OFF” button illuminates in blue, and the LCD display firstly indicates 25°C and then indicates the current water temperature. When the temperature reaches the set temperature, a beep can be heard, the appliance will stop working, the indicator of “ON/OFF” button will turn off and the LCD display will extinguish after 15 seconds, then the appliance will enter into standby mode. Press the “ON/OFF” button again at any time during working, the appliance will stop working, the indicator of “ON/OFF” button will turn off, the LCD display will extinguish after 15 seconds and the appliance will enter into standby mode.

2. BREW TEA

Put the kettle body on the power base, connect with the power source, the “Brewing temperature” shown in the LCD display is 100°C, and the “Brewing time” is 0:00. Press the “TEA” button to select

Introduction For Buttons

1. ON/OFF button

For the start and end of the working mode. During working, the “AUTO START” button, “TEA” button and the “Temperature setting buttons” are invalid. Press the “Keep Warm” button, the appliance will enter into keep-warm mode, press it again to exit. And you can press the “Time setting buttons” to select the brewing time.

2. TEA button

Type of tea and the corresponding temperatures

Green: 80°C, the temperature of water for brewing shall be 80°C 5°C, the tea temperature shall be 60°C;

Black: 100°C, the temperature of water for brewing shall be 98°C, the tea temperature shall be 60°C;

White: 85°C, the temperature of water for brewing shall be 85°C 5°C, the tea temperature shall be 60°C;

Herbal: 100°C, the temperature of water for brewing shall be 8°C, the tea temperature shall be 60°C;

Oolong: 90°C, the temperature of water for brewing shall be 90°C 5°C, the tea temperature shall be 60°C;

Custom: 70-100°C, the temperature of water for brewing shall be 98°C, others are 5°C of the set temperature.

3. Custom button

It is used for selecting the strength of tea, and the corresponding brewing time for each tea strength is as follows:

Green:

Strong: 4 minutes; Medium: 3 minutes; Mild: 2 minutes; Custom: 0-10mins.

Black:

Strong: 3 minutes; Medium: 2 minutes; Mild: 2 minutes; Custom: 0-10mins.

White:

Strong: 4 minutes; Medium: 3 minutes; Mild: 2 minutes; Custom: 0-10mins.

Herbal:

Strong: 5 minutes; Medium: 4 minutes; Mild: 3 minutes; Custom: 0-10mins.

Oolong:

Strong: 4 minutes; Medium: 3 minutes; Mild: 2 minutes; Custom: 0-10mins.

Note: When the tea-brewing time is 0, the appliance is operated under the mode of brewing water and the tea-brewing basket will not move.


4. AUTO START button

It is used for the start and end of the auto-start function. Press the “AUTO START” button, its corresponding indicator illuminates in blue, the LCD display turns on and indicate the “Current time” and “Auto-start time”, then press the “ON/OFF” button to activate the “Auto Start” function. To exit from the “Auto Start” working mode, press any button except the “ON/OFF” button or “Keep

Important Safeguards

23. The appliance must not be immersed.
24. Do not use the appliance for other than intended use.
25. The kettle can only use with the stand provided.
26. If the kettle is overfilled, boiling water may spill out.
27. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
28. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
30. Save these instructions

Know Your Water Kettle

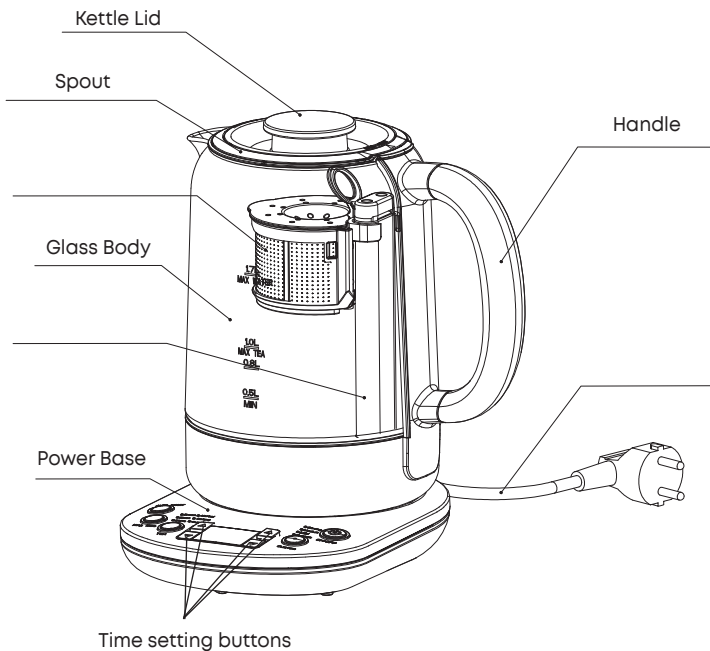

Important Safeguards

1. Read all instructions before using.
2. Before connecting the Tea Maker to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the Tea Maker.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
5. Do not place on or near a hot gas or electric burner or in a heated oven.
6. Do not operate the appliance without anything in it to avoid damaging the heat elements.
7. Ensure that the Tea Maker is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and prevent damage or injury.
8. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
9. While water is boiling, or just after the water has been boiled, avoid contact with steam from the spout.
10. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
11. Be careful of refilling when the Tea Maker is hot.
12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Do not touch the hot surface. Use the handle or the button.
15. The attached base can not be used for other than intended use
16. Extreme caution must be used when moving an appliance containing hot water.
17. The appliance is not a toy. Do not let the children play it.
18. The Tea Maker is for household use only. Do not use outdoors.
19. Do not detach filter during normal use to avoid spilling over.
20. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
21. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
22. To disconnect, turn any control to "off;" then remove plug from wall outlet.

TORNADO

Model
TTM-800



Thanks for Choosing Tornado
Digital Tea Maker

ELARABY

19319  elarabygroup.com
 TORNADO

Digital Tea Maker
OWNER'S MANUAL

TORNADO is A Registered Trademark Of El-araby Company.