

TORNADO



شكراً لإختيارك ماكينة حلاقة الشعر - تورنيڊو

هذه العلامة تورنيڊو هي علامة تجارية مسجلة خاصة بشركة العربي

موديل
TCP-61B

ماكينة حلاقة الشعر
دليل التشغيل

ELARABY



19319

www.elarabygroup.com



Tornado


نشكركم على شراء ماكينة الحلاقة تورنيدو.

قبل الاستخدام، يرجى قراءة كافة التعليمات الواردة في هذا الدليل بعناية، حتى لو كنت معتاداً على استخدام منتجات مماثلة. يرجى استخدام هذا المنتج وفقاً للتعليمات الموضحة في دليل المستخدم فقط. احتفظ بهذا الدليل في مكان آمن حيث يمكن الرجوع إليه بسهولة في المستقبل.

تحذير

يرجى مراعاة تعليمات السلامة:


١. قد يؤدي عدم الالتزام بالتعليمات إلى إصابات خطيرة، أو صدمات كهربائية، أو الحرق أو ماس كهربائي.
٢. حافظ على بقاء المنتج جافاً، ولا تقم بشحنه أبداً عند درجة حرارة أقل من ٠° درجة مئوية (٣٢ درجة فهرنهايت) أو أعلى من ٤٠° (١٠٤ درجة فهرنهايت) ولا تعرضه لاشعة الشمس المباشرة، ولا تقربه من أماكن الحرارة والرطوبة.
٣. في حالة تلف سلك التوصيل USB، عليك التوقف عن استخدام المنتج والاتصال بمركز الصيانة على الفور.
٤. يرجى عدم توصيل وفصل سلك USB ويديك مبتلة، لا تدع سلك USB يبتل.
٥. يرجى عدم مسح المنتج أو سلك التوصيل USB بالتر، أو البنزين أو الكحول.
٦. يمكن أن يستخدم الأطفال من سن ٣ سنوات هذا الجهاز تحت إشراف.
٧. يمكن للأطفال الذين تتراوح أعمارهم من سن ٨ سنوات وما فوق؛ والأشخاص الذين يعانون من قدرات بدنية، أو حسية، أو ذهنية أو نقص الخبرة والمعرفة استخدام هذا الجهاز إذا كانوا تحت إشراف أو إذا حصلوا على تعليمات بشأن استخدام الجهاز بطريقة آمنة وفهم المخاطر التي ينطوي عليها استخدام الجهاز. يجب ألا يعبث الأطفال بالجهاز. يجب ألا يقوم الأطفال بعمليات التنظيف والصيانة دون إشراف.
٨. يرجى عدم الضغط على الشفرة باتجاه مقابل للجلد.
٩. يرجى عدم استخدام ماكينة الحلاقة لأي غرض آخر غير التهذيب، ويرجى عدم استخدامها لتهذيب شعر الحيوانات الأليفة.
١٠. تأكد من أن الشفرات غير تالفة أو مشوهة قبل الاستخدام.
١١. لا تقم بفك أو إجراء التعديلات على المنتج. لا تحاول إصلاحه. يجب دائماً أن تتصل بالوكيل لإصلاحه.
١٢. يرجى التعامل مع البطاريات وفقاً لتوجيهات الحكومة عند الضرورة، حيث أنها قد تلوث البيئة.
١٣. يرجى وضع المنتج بعيداً عن متناول الأطفال، لتجنب المخاطر.
١٤. يرجى استخدام المنتج وفقاً لنطاق الاستخدام بالدليل.
١٥. يرجى حفظ دليل التعليمات والاعتناء به، للرجوع إليه عند الحاجة.
١٦. يجب شحن الجهاز باستخدام المحول المرفق مع جهاز تورنيدو.

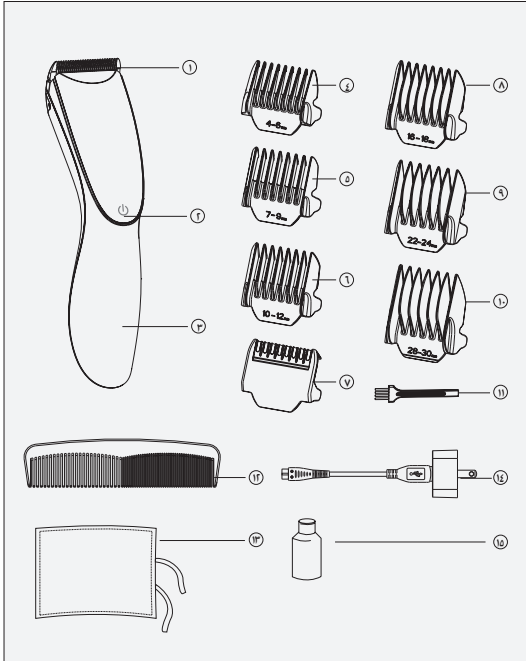

٩. مشط قابل للضغط ٢٢-٢٤مم
١٠. مشط قابل للضغط ٢٨-٣٠مم
١١. فرشاة التنظيف
١٢. مشط
١٣. سترة الحماية
١٤. المحول
١٥. زيت التشحيم

١. الشفرة
٢. زر التشغيل
٣. مؤشر الشحن الليد
٤. مشط قابل للضغط ٦-٤مم
٥. مشط قابل للضغط ٧-٩مم
٦. مشط قابل للضغط ١٠-١٢مم
٧. مشط لتخفيف الشعر
٨. مشط قابل للضغط ١٦-١٨مم

كيفية الاستخدام

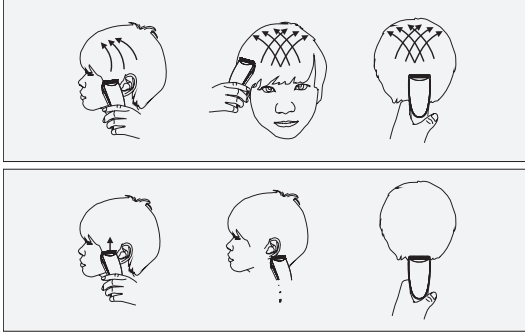


١. اضغط على زر التشغيل لتشغيل ماكينة الحلاقة.

٢. قص باستخدام مشط قابل للضغط: قم بتحريك ماكينة الحلاقة على الشعر كله وقص حتى تحصل على الطول الذي ترغب فيه. لا تستخدم أداة التهذيب في الاتجاه المعاكس، حتى لا يُقص الشعر كثيراً.

٣. قم بإيقاف تشغيل ماكينة الحلاقة.

أ. تركيب الشفرة

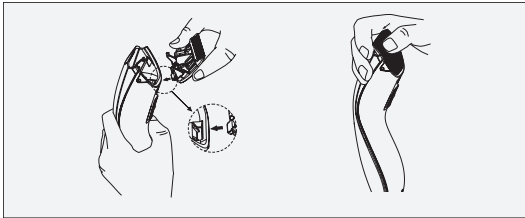


١. قم بإدخال لوح الشفرة في فتحة قاعدة رأس الماكينة (كما هو موضح في الصورة أعلاه). امسك

الشفرة، وادفعها إلى قاعدة رأس الماكينة بلطف.


٢. قم بمحاذاة إبزيم القفل، وادفع الشفرة إلى داخل الفتحة. عندما تسمع صوت "النقر"، فقد تم التركيب.

ب. تركيب واستخدام مشط قابل للضغط

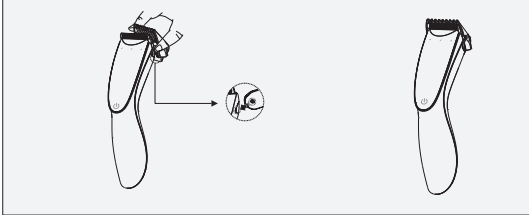


١. ضع قطبي التثبيت بجانب المشط القابل للضغط لمحاذاة فتحة إبزيم جسم الماكينة، ثم اضغط على المشط القابل للضغط ليثبت به، ويمكن سماع صوت "النقر"، ومن ثم يمكن قص الشعر.
٢. يمكنك اختيار المشط القابل للضغط وفقاً لطول الشعر الذي تريد قصه.
٣. بعد الاستخدام، اسحب المشط القابل للضغط مباشرة.

التنظيف والصيانة

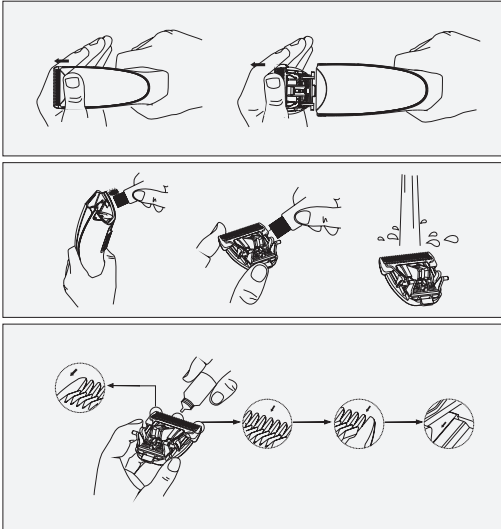

- للحصول على النظافة والراحة، نوصي بتنظيف ماكينة حلاقة الشعر بصفة دورية. يحافظ التنظيف الدوري على ماكينة حلاقة الشعر بحالة جيدة ويمنع ظهور الروائح أو البكتيريا، ويحافظ على روعة الأداء أثناء الحلاقة.
- ١. قم بإيقاف تشغيل ماكينة الحلاقة.
- ٢. امسك الشفرة، واسحبها للخارج نحو الاتجاه الموضح بالشكل وانزع الشفرة.
- ٣. قم بتنظيف الرأس والشفرة بفرشاة، اشطف أجزاء الشفرة بالماء مباشرة. بعد الشطف، امسح أجزاء الشفرة بقطعة قماش ثم جففها.
- ٤. بعد تنظيف الشفرات بالماء أو الفرشاة وتجفيفها، أضف بعض قطرات الزيت في الأماكن التي تشير إليها الأسهم.
- ٥. قم بتركيب أجزاء الماكينة بعد التنظيف.

الشحن

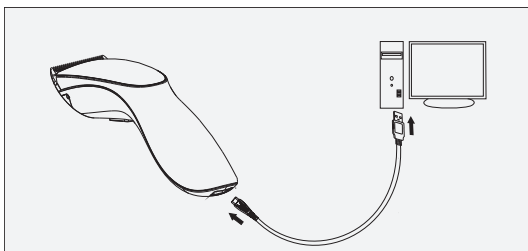

- ١. قم بإيقاف تشغيل ماكينة حلاقة الشعر.
- ٢. قم بتوصيل سلك الكهرباء بالماكينة، ثم ادخل سلك الكهرباء في مخرج التيار المتردد.
- ٣. عند الشحن، يضيء مؤشر الشحن الليد باللون الأحمر ويتحول إلى اللون الأخضر بعد انتهاء الشحن. يستغرق الشحن حوالي ٩٠ دقيقة. بعد الشحن، افصل سلك الكهرباء من المنتج.
- ٤. وقت التشغيل: عندما يتم استكمال شحن المنتج، يمكن استخدامه لاسلكياً لمدة تصل إلى ٤٠ دقيقة.


إعادة تدوير البطارية

تحتوي البطاريات على مواد قد تلوث البيئة. لا يمكن للمستهلك استبدال البطارية بهذا المنتج. ولكن قد تستبدل البطاريات في مركز خدمة معتمد.

تحذير:

١. يجب فك البطارية من الجهاز قبل التخلص منها.
٢. يجب فصل الجهاز عن سلك الكهرباء عند فك البطارية.
٣. قم بفك البطارية كما نوصي في الإجراء التالي.
٤. يجب أن تكون البطارية قد استنفدت تماماً قبل نزعها.
٥. يجب التخلص من البطارية بطريقة آمنة.

طريقة فك البطارية:

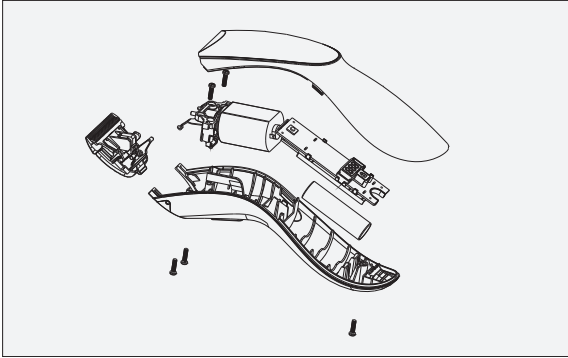

١. قم بفك كل البراغي من جسم الماكينة.
٢. قم بنزع الغلاف الخارجي.
٣. قم بإخراج لوحة الدوائر الكهربائية، وفك الجزء المعدني على جانبي البطارية، ثم قم بإخراج البطارية.

الضمان

١. نمنحك ضماناً لمدة ١٢ شهراً على المنتج بدءاً من تاريخ الشراء.
٢. أثناء فترة الضمان، نقوم بإصلاح الجهاز أو استبداله بأخر جديد مجاناً في حالة وجود أي عيوب في المواد أو التصنيع.
٣. للحصول على الخدمة أثناء فترة الضمان، قم بتسليم أو إرسال الجهاز بالكامل مع إرفاق إيصال البيع الخاص بك إلى مركز خدمة عملاء العربي المعتمد.

لا يسري هذا الضمان على:

١. الأضرار الناجمة عن الاستخدام غير السليم.
٢. التآكل أو الاستخدام العادي وكذلك العيوب التي لن تؤثر على قيمة الجهاز.
٣. يعتبر الضمان لاغياً إذا خضع الجهاز لأي إصلاحات من أشخاص غير معتمدين من قبل العربي بصيانة الجهاز وإذا تم استخدام قطع غيار غير أصلية.

المواصفات الفنية

- رقم الموديل: TCP-61B
- مدخلات المحول: ٢٤٠-١٠٠ فولت ~ ٦٠/٥٠ هرتز
- جهد التشغيل: ٥ فولت

التخلص الصحيح من هذا المنتج

تشير هذه العلامة إلى أنه لا يجب التخلص من هذا المنتج مع النفايات المنزلية الأخرى لمنع الضرر المحتمل على البيئة أو على صحة الإنسان من التخلص غير السليم للنفايات، تحمل مسؤولية إعادة تدويره لتعزيز إعادة الاستخدام المستدام للأجهزة.



ELARABY



19319

www.elarabygroup.Com
Tornado

warranty

1. We grant 12 months guarantee on the product commencing on the date of purchase.
2. Within the guarantee period, we will repair or replace for a new one for free if there is any defects in materials or workmanship.
3. To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorized EL Araby customer service center.

This guarantee does not cover:

1. Damage due to improper use.
2. Normal wear or use as well as defects that will not affect the value of appliance.
3. The guarantee becomes invalid if repairs are undertaken by unauthorized from El Araby and if use non-original spare parts for repairing.

Technical specifications

- . Model No.: TCP-61B
- . Adapter input: 100-240V~50/60Hz
- . Rated voltage: 5V

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

ELARABY



19319

www.elarabygroup.Com

 Tornado


Recycling the battery

Batteries contain substances that may pollute the environment. The battery in this product is not intended to be replaced by consumers. However, the batteries may be replaced at an authorized service center.

Warning:

1. The battery must be removed from the appliance before it is scrapped.
2. The appliance must be disconnected from the supply cord when removing the battery.
3. Disassemble the battery as below recommend procedure.
4. Only in the battery completely exhausted before the battery removed.
5. The battery should be of a safe disposal.

Batteries remove method:

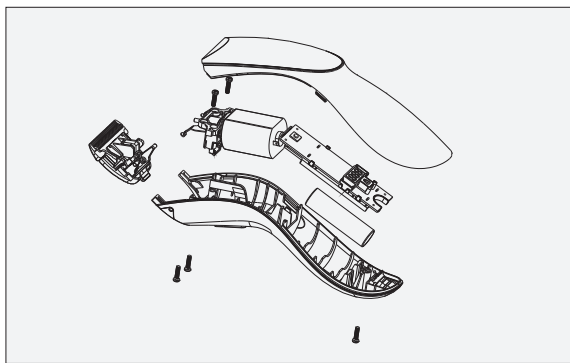


1. Disassemble all screws from the body.
2. Remove the shell.
3. Take out the circuit board, cut short the metal on both sides of the battery, and take out the battery.

For cleanliness and convenience, we recommend regular cleaning of hair clipper. Regular cleaning will keep your hair clipper in good condition while preventing odors or bacteria, and maintain the clipping performance.


1. Turn off the clipper.
2. Hold the blade, pull outside towards as figure indicates and take off the blade.
3. Clean the head and blade with a brush. Flush the blade assembly by water directly. After flushing, wipe the blade assembly by cloth and then dry it.
4. After cleaning the blades with water or brush and dry it, add some drops of oil to the points indicated by arrows.
5. Assemble the components after cleaning.

Charging

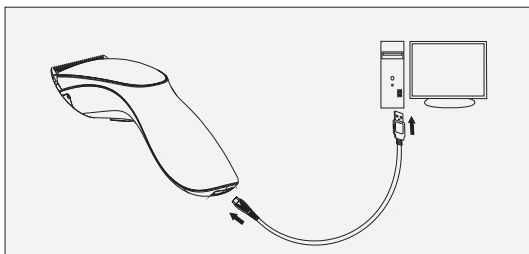


1. Turn off the hair clipper stop.
2. Connect the power cord with the clipper, then insert power cord into the AC outlet.
3. When charging, the LED power indicator lights up red and turns to green after charging finished. It takes about 90 minutes for charging. After charging, disconnect the power cord from the product.
4. Operating time, when the product is fully charged, it has a cordless operating time of up to 40 minutes.

B. The installation and use of adjustable comb

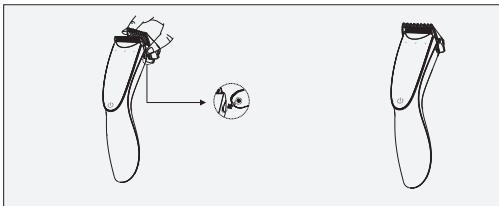


1. Post the position pole on both sides of the adjustable comb to align the buckle hole of the body, and then press the adjustable comb to make them fit, and the “click” voice can be heard, then the hair can be clipped.
2. You can choose the adjustable comb depending on the length of hair you want to clip.
3. After use, pull out the adjustable comb directly.

Cleaning and maintenance

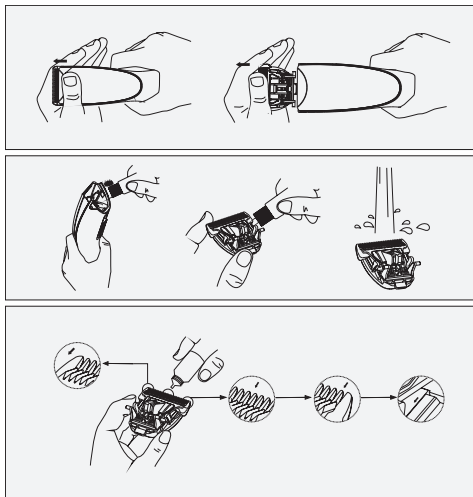


How to use

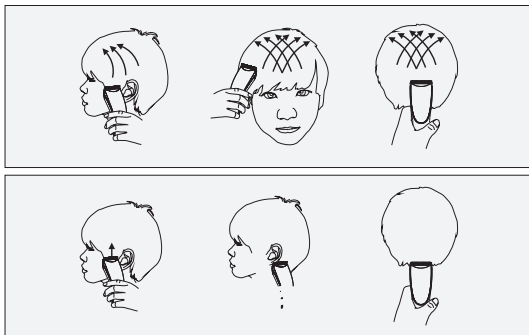


1. Press the switch button to turn on the clipper.
2. Clip with an adjustable comb:
 - Move the clipper along the hair and clip to users' desirable length.
 - Do not use the trimmer in reverse, or the hair may be clipped too much.
3. Turn the hair clipper off.

A. The installation of blade

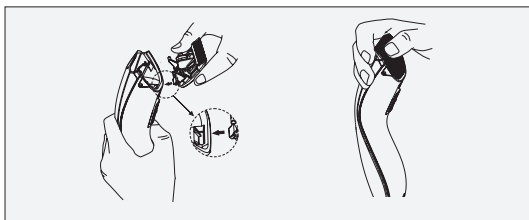

1. Insert the blade bar into head-base slot (as the above picture) . Hold the blade, and push to head-base gently.
2. Align the locking buckle, and push blade into the slot. When you hear "click" sound, it is done.

Product Structure

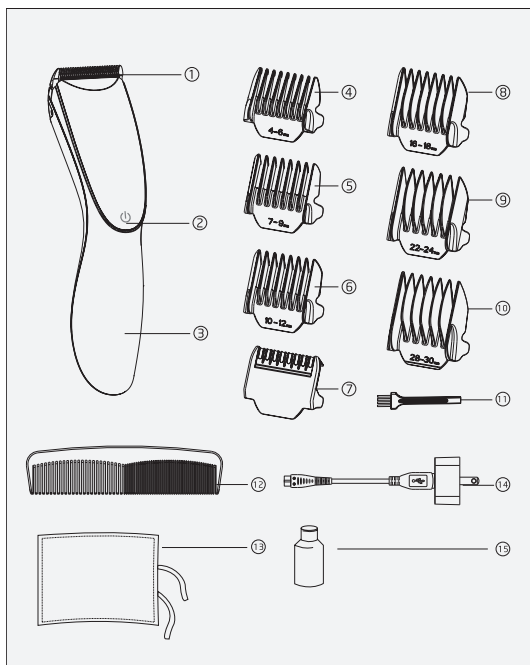

- | | |
|-----------------------------|-----------------------------|
| 1. Blade | 9. Adjustable comb 22-24mm |
| 2. Switch | 10. Adjustable comb 28-30mm |
| 3. led power indicator | 11. Cleaning brush |
| 4. Adjustable comb 4-6mm | 12. Comb |
| 5. Adjustable comb 7-9mm | 13. Barber cape |
| 6. Adjustable comb 10-12mm | 14. Adaptor |
| 7. Thinning attachment comb | 15. Lubricating oil |
| 8. Adjustable comb 16-18mm | |

Thank you for purchasing TORNADO clipper.

Before first use, please read all instructions contained in this user's manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

Caution

Please observe the Safety instructions:

1. Failure to observe it may result in, serious injury, electric shock, fire or short circuit.
2. Maintain product drying, never charge at the temperature below 0°C (32°F) or above 40°C (104°F) to direct sunlight, close to the heat and humid places.
3. If the USB line is damaged, you should stop using your product and contact the maintenance point immediately.
4. Please do not insert and remove the USB line with wet hands, do not allow the USB line to get wet.
5. Please do not wipe the product or USB liner with thinner, benzene or alcohol.
6. This appliance can be used for children aged from 3 years under supervision.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
8. Please do not press the blade against the skin.
9. Please do not use the clipper for any purpose other than trimming, and do not trim the hair of a pet.
10. Check that the blades are not damaged or deformed before use.
11. Do not disassemble or modify the product. Do not attempt repairs. Repairs must always be requested to your dealer.
12. Because of the built-in battery can pollute the environment, when needed, please treat the battery according to government guidelines.
13. Please put the product out of reach of children, in order to avoid danger.
14. Please use the product according to the range of manual.
15. Please keep the instructions manual properly, in order for ready reference.
16. The appliance should be charged by adaptor which supplied by TORNADO.

TORNADO

Model
TCP-61B



Thanks for Choosing Tornado
Hair Clipper

ELARABY



19319

www.elarabygroup.com



Tornado