

TORNADO



شكراً لاختيارك خلاط شخصي - تورنيديو

موديل
PB-320T

دليل التشغيل
خلاط شخصي

ELARABY



19319

www.elarabygroup.com

Tornado

إجراءات وقائية مهمة

عند استخدام جهاز كهربائي، يجب دائمًا اتباع احتياطات السلامة الأساسية والتي تتضمن ما يلي:

١. قراءة كافة التعليمات.
٢. قبل الاستخدام، تأكد من أن فولتية مصدر التيار الكهربائي مماثلة للفولتية المحددة بلوحة تصنيف الجهاز.
٣. لا تدع السلك يتدلى من حافة طاولة أو منضدة.
٤. لا تقم بتشغيل أي جهاز باستخدام سلك أو قابس تالف، أو في حالة تعطل الجهاز، أو تلفه بأي شكل من الأشكال. أعد الجهاز إلى أقرب مركز خدمة معتمد للفحص، أو الإصلاح أو الضبط.
٥. في حالة تلف سلك الإمداد، فيجب أن تستبدله الشركة المصنعة، أو مركز خدمة العملاء أو شخص مختص لتفادي المخاطر.
٦. تجنب لمس الأجزاء المتحركة.
٧. إن الشفرات حادة، لذا يجب استخدامها بحذر.
٨. لا تستخدم سوائل ساخنة أبدًا ولا تقم بتشغيل الجهاز وهو فارغ.
٩. قد يتسبب استخدام المرفقات غير الموصي بها أو المبيعة من قبل الشركة المصنعة في حدوث حريق، أو صدمات كهربائية أو إصابات.
١٠. لا يمكن استخدام الجهاز لمزج أو طحن مادة صلبة وجافة، وإلا فقد تنكسر الشفرة. ولكن يمكن استخدامه لمزج مكعبات الثلج.
١١. افصل الجهاز من منفذ التيار الكهربائي عندما لا يكون الجهاز قيد الاستخدام، وقبل تركيب أو فك الأجزاء، وقبل التنظيف.
١٢. للحماية من خطر حدوث صدمات كهربائية، لا تضع الوحدة في المياه أو في سائل آخر.
١٣. تأكد من تثبيت غطاء الخلط في مكانه قبل تشغيل الجهاز.
١٤. أبعد يديك والأواني عن الحاوية أثناء الخلط أو الطحن للحد من خطر إصابات الأشخاص الجسيمة أو تلف الخلاط. يمكن استخدام مكشطة ولكن يجب استخدامها في حالة توقف تشغيل الخلاط.
١٥. للحد من خطر حدوث إصابات، لا تقم أبدًا بتثبيت قطعة شفرات التقطيع بالقاعدة دون تثبيت الكأس أو الوعاء بشكل صحيح.
١٦. إن هذا الجهاز غير مُعد ليستخدمه الأشخاص الذين يعانون من قدرات بدنية، أو حسية، أو ذهنية منخفضة أو من تنقصهم الخبرة والمعرفة، إلا إذا كانوا تحت إشراف أو إذا حصلوا على تعليمات بشأن استخدام الجهاز بطريقة آمنة وإذا أدركوا المخاطر التي ينطوي عليها استخدام الجهاز.
١٧. يجب مراقبة الأطفال للتأكد من أنهم لا يعبثون بالجهاز.
١٨. لا تغمر وحدة المحرك في المياه أو في السوائل الأخرى.
١٩. لا تستخدم الجهاز خارج المنزل.
٢٠. إن هذا الجهاز معد للاستخدام المنزلي والاستخدامات المماثلة مثل:
 - مناطق مطابخ الموظفين في المحلات التجارية، والمكاتب وغيرها من بيئات العمل؛
 - في بيئات العمل الزراعية؛
 - يستخدمها العملاء في الفنادق، والموتيلات وغيرها من أمثلة البيئات السكنية؛
 - البيئات مثل فنادق المبيت والإفطار.
٢١. احتفظ بهذه التعليمات.
٢٢. لا يجب أن يستخدم الأطفال هذا الجهاز. احتفظ بالجهاز وسلك الكهرباء بعيدًا عن متناول الأطفال.
٢٣. قم بإيقاف تشغيل الجهاز وافصله من الكهرباء قبل تغيير المرفقات أو قبل الاقتراب من الأجزاء المتحركة أثناء الاستخدام.

تعرف على أجزاء الخلاط الخاص بك



قبل استخدام الجهاز لأول مرة

تأكد من اكتمال كافة الأجزاء وأنها غير تالفة. اختار المرفق المناسب لإتمام المهمة المطلوبة. إن مرفق المزج مناسب لمزج الفواكه والخضروات أو جرش الثلج. قم بتنظيف المرفق وفقاً لقسم "التنظيف والصيانة".

تحذير: إن الشفرة حادة، استخدمها بحذر شديد وتأكد من فصل الجهاز من منفذ الكهرباء قبل تركيب وفك الأجزاء.

تشغيل الخلاط

١. ضع وحدة المحرك على سطح أفقي مستوي وتأكد من أنه غير متصل بالكهرباء. ملحوظة: يوجد جهاز أقفال الأمان الداخلية في قاعدة الكأس، إذا لم يتم تركيب الكأس في مكانه، لن يعمل الخلاط.
٢. افتح غطاء الكأس عن طريق لفه عكس اتجاه عقارب الساعة على السطح المستوي. قشر الفواكه أو الخضروات أو انزع البذور منها ثم قطعها إلى قطع صغيرة، ثم ضعها في الكأس. قم بتثبيت قاعدة الكأس به وذلك بلغها في اتجاه عقارب الساعة، ثم اقلب كل قطعة الكأس وثبتها بوحدة المحرك عن طريق لفها في اتجاه عقارب الساعة. يجب عادة إضافة كمية معينة من المياه النقية لتسهيل التشغيل السلس للجهاز. يجب ألا تتجاوز كمية الخليط الحد الأقصى كما هو موضح بالكأس، ولا يجب أن تقل عن الحد الأدنى. وتكون أفضل نسبة من الفاكهة أو الخضروات والمياه هي ٢:٣.
٣. لخاصية المزج: على سبيل المثال: مع كمية الأناناس والليمون والبرتقال (مقاس: ١٥*١٥*١٥ مم)، تكون أفضل نسبة من الفاكهة والمياه هي ٢:٣.

وصفة طعام


١. ضع وحدة المحرك على سطح أفقي مستوي وتأكد من أنه غير متصل بالكهرباء. ملحوظة: يوجد جهاز أقفال الأمان الداخلية في قاعدة الكأس، إذا لم يتم تركيب الكأس في مكانه، لن يعمل الخلاط.
٢. افتح غطاء الكأس عن طريق لفه عكس اتجاه عقارب الساعة على السطح المستوي. قشر الفواكه أو الخضروات أو انزع البذور منها ثم قطعها إلى قطع صغيرة، ثم ضعها في الكأس. قم بتثبيت قاعدة الكأس به وذلك بلغها في اتجاه عقارب الساعة، ثم اقلب كل قطعة الكأس وثبتها بوحدة المحرك عن طريق لفها في اتجاه عقارب الساعة. يجب عادة إضافة كمية معينة من المياه النقية لتسهيل التشغيل السلس للجهاز. يجب ألا تتجاوز كمية الخليط الحد الأقصى كما هو موضح بالكأس، ولا يجب أن تقل عن الحد الأدنى. وتكون أفضل نسبة من الفاكهة أو الخضروات والمياه هي ٢: ٣.
٣. لخاصية المزج: على سبيل المثال: مع كمية الأناناس والليمون والبرتقال (مقاس: ١٥*١٥*١٥مم)، تكون أفضل نسبة من الفاكهة والمياه هي ٢: ٣.

وقت التشغيل	الوزن	نوع الطعام	المرفق
١ دقيقة	جزر: ٢٤٠ جرام مياه: ٣٦٠ مل	جزر	المزج باستخدام الكأس
١ دقيقة	جزر: ١٢٠ جرام مياه: ١٨٠ مل	جزر	المزج باستخدام الكأس الصغير
تشغيل "P" اختيار الخاصة ٢ ثانية + إيقاف التشغيل ٢ ١٠ دورات x (ثانية)	إجمالي الوزن: ٥٠ جم حد أقصى؛ الحجم: ٢سم*٢سم*٢سم درجة الحرارة: -١٨ درجة مئوية	جرش الثلج	المزج باستخدام الكأس

ملحوظة: لا يمكن استخدام الخلاط لخفق بياض البيض، وهرس البطاطس، وخلط العجين واستخراج العصير من الفواكه والخضروات.

٤. تأكد من أن محدد السرعة Speed Selector على الوضع "٠"، ثم أدخل القابس في منفذ الكهرباء واضبط محدد السرعة على السرعة المطلوبة. يمكنك لف محدد السرعة وضبطه على الوضع "P" دون توقف في حالة رغبتك في زيادة سرعة عملية المزج. توضح المعلومات التفصيلية فيما يلي (انظر الشكل ٢).

وصفة طعام

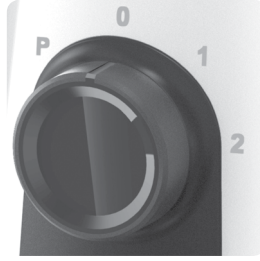

الشكل رقم ٢

- ملحوظة ١: تأكد من تثبيت قاعدة الكأس بالكامل في مكانها قبل التشغيل.
٥. لا تقم بتشغيل الجهاز لأكثر من دقيقة واحدة كل مرة، وانتظر فقط حتى تبرد الوحدة وتصل إلى درجة حرارة الغرفة، قبل تشغيل الدورة التالية.
٦. لف محدد السرعة إلى الوضع "٠" بمجرد مزج الخليط بالقوام المطلوب.
٧. لف الجزء الخاص بالكأس عكس اتجاه عقارب الساعة ثم فكه من وحدة المحرك، اقلب الجزء الخاص بالكأس، ثم انزع قاعدة الكأس بحرص عن طريق لفها عكس عقارب الساعة، ثم صب المكونات وقدمها.


التنظيف والصيانة

تأكد من فصل الجهاز من مصدر الكهرباء قبل التنظيف.

تنظيف الخلاط

يمكن لخاصية التنظيف تنظيف الخلاط بسهولة وسرعة بآمان تام.

١. اسكب القليل من الماء الدافئ والصابون في الكأس ثم أدر محدد السرعة إلى الوضع "P" مع تثبيت الاختيار لعدة ثوانٍ.
٢. افصل الأجزاء القابلة للفصل. قم بفصل الكأس من وحدة المحرك واشطفه بالماء الجاري، ثم فك قاعدة الكأس من الجزء الخاص بالكأس. اشطف الكأس، وقاعدة الكأس والشفرة بالماء الجاري.

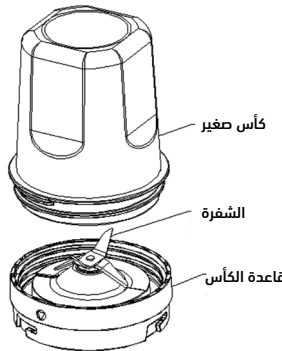

وصفة طعام

٣. امسح السطح الخارجي لوحدة المحرك بقطعة قماش رطبة.
- ملحوظة: لا تستخدم منظف كاشط ولا تقم أبدًا بغمر وحدة المحرك في المياه للتنظيف.
٤. قم بتجفيف كافة الأجزاء وقم بتركيبها.
- ملحوظة: إذا واجهتك أي مشكلة أثناء الاستخدام، لا تقوم أبدًا بفك وحدة المحرك بنفسك. يوجد بداخلها أجزاء لا يمكن أن يتعامل معها المستخدم. فقط أبلغ مركز الخدمة المعتمد للفحص والإصلاح.

التخلص من الجهاز الصديق للبيئة



يمكنك المساعدة في حماية البيئة!
يرجى تذكر احترام القوانين المحلية: تُسلم الأجهزة الكهربائية
التي لا تعمل إلى مركز التخلص من النفايات المناسب.

Cleaning And Maintenance

3. Wipe the outer surface of motor unit and with a damp cloth.

NOTE: Do not use abrasive cleanser and never immerse motor unit in water for cleaning

4. Dry all parts and then assemble them.

NOTE: If any problem has been encountered during using, never disassemble the Motor Unit by yourself. There are no user serviceable parts inside. Only contact the authorized service facility for examination and repair.

Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal center.



ELARABY



19319

www.elarabygroup.Com

f Tornado

Know Your Blender

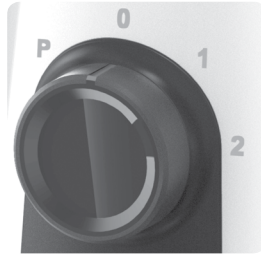


Fig2

NOTE 1 : Make sure the jar base is placed in position completely before operating.

5. Do not run the appliance for more than 1 minutes per time, and only wait until the unit is cooled to room temperature before performing next operation cycle.

6. Turn the Speed Selector to “ 0 ” position once the mixture has been blended to your desired consistency.

7. Turn the jar assembly anti-clockwise and remove it from the motor unit, reverse the jar assembly, carefully take down the jar base by turning anticlockwise, then pour and serve.


Cleaning And Maintenance

Make sure to disconnect appliance from power supply before cleaning
For blender

The Clean function can clean the blender easily and rapidly in complete safety.

1. Pour a little warm soapy water into the Jar and turn the Speed Selector to “P” position without releasing it for a few seconds.

2. Dismantle all detachable parts. Disassemble the Jar from the motor unit and rinse it under running water, then detach the jar base from the jar assembly. Rinse the jar, jar base and blade asm under running water.

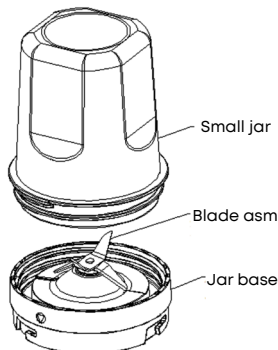

Know Your Blender

1. Lay the motor unit on the flat horizontal surface and make sure it is unplugged.

NOTE: There is a safety interlock device at the bottom of jar, if the jar is not assembled in place, the blender will not operate.

2. Open the jar cover by turning anticlockwise and place jar on the flat surface. Peel or core the fruits or vegetables and then cut them into small pieces, then put them into the jar. Install jar base onto the jar by turning clockwise, then reverse the whole jar assembly and install it onto motor unit by turning clockwise. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The amount of mixture should not exceed the max level as indicated on the jar, nor sit lower the min level. The best proportion of the fruits or vegetables and water is 2:3.

3. For blending function: for example: the quantity of pineapple, lemon, orange (size: 15*15*15mm) the best proportion of the fruits and water is 2:3
Food formula:

Attachment	Food Type	Weight / Spec.	Time
Blender With Jar	Carrot	Carrots: 240G Water: 360ML	1 Minutes
Blender With Small Jar	Carrot	Carrots: 120G Water: 180ML	1 Minutes
Blender With Jar	Ice Crush	Total Weight max 50G Size: 2Cm* 2Cm *2Cm Temperature -18	Selector "P" Function (On 2Sec.+Off 2Sec.) X10 Cycle

NOTE: The blender is not applicable for beating egg white, mashing potatoes, mixing dough, extracting juice from fruit and vegetable.

4. Ensure the Speed Selector to " 0 " Position, then plug into power outlet and set Speed Selector to your desired setting. You can turn the speed selector to "P" without releasing it if want to accelerate the process of blending. The detailed information is shown in below fig. 2

Important Safety Instructions


– Bed and breakfast type environments.

21. Save these instructions.

22. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

23. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

Know Your Blender

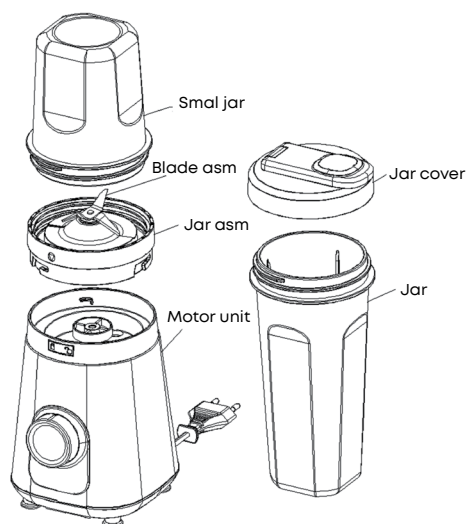

Before The First Use

Check that all parts are complete and not damaged. Choose the appropriate attachment to perform your desired task. The blender attachment is suitable for blending fruits or vegetables or crushing ice. Clean the attachment according to the section “CLEANING AND MAINTENANCE”.

WARNING: The blade is sharp, handle with great care and ensure that unplug the appliance from outlet before assembling and removing parts.

Important Safety Instructions

When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not let cord hang over edge of table or counter.
4. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
5. If the supply cord is damaged it must be replaced by the manufacture or its service agent or a similarly quality person in order to avoid a hazard .
6. Avoid contacting moving parts.
7. Blades are sharp, so handle carefully.
8. Never use hot liquids or run the appliance empty.
9. The use of accessory not recommended or sold by the manufacturer may cause fire electric shock or injury
10. The appliance can not be used for blending or grinding hard and dry substance, otherwise the blade could be blunted. But it can be used for blending ice cube.
11. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
12. To protect against risk of electrical shock do not put unit in water or other liquid.
13. Be sure blending cover is accurately put in place before operating appliance
14. Keep hands and utensils out of container while blending or grinding to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
15. To reduce the risk of injury, never place cutter-assembly blades on base without jar or bowl properly attached.
16. This appliance is not intended for used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved
17. Children should be supervised to ensure that they do not play with the appliance.
18. Do not immerse the Motor Unit into water or other liquids.
19. Do not use outdoors.
20. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;

TORNADO

Model
PB-320T



Thanks for Choosing Tornado
Personal Blender

ELARABY



19319

www.elarabygroup.com

Tornado