

TORNADO



موديل

TSJ-6001

عمارة بتقنية العصر البطيء
دليل التشغيل

شكراً لإختيارك عصارة بتقنية العصر البطيء - تورنيديو

هذه العلامة تورنيديو هي علامة تجارية مسجلة خاصة بشركة العربي

ELARABY

19319  elarabygroup.com
TORNADO


إجراءات وقائية مهمة

عند استخدام الجهاز الكهربائي، يجب اتباع احتياطات الأمان الرئيسية التالية:

١. قراءة كافة التعليمات.
٢. قبل الاستخدام، تأكد من أن فولتية التيار الكهربائي مطابقة لتلك الموضحة على بطاقة الجهاز.
٣. لا تقم بتشغيل أي جهاز باستخدام سلك أو قابس تالف أو بعد تعطل الجهاز أو تلفه بأي شكل من الأشكال. أعد الجهاز إلى أقرب مركز خدمة للفحص، أو الإصلاح أو الضبط.
٤. قد يتسبب استخدام المرفقات، والتي تتضمن المصفاة، والغطاء العلوي، ودافع الطعام، والوعاء التي لم توصي بها أو تباعها الشركة المصنعة في نشوب حريق، أو صدمة كهربائية أو إصابات.
٥. لا تضع الجهاز على أو بالقرب من فرن غاز، أو موقد كهربائي أو فرن ساخن.
٦. لا تدع السلك يتدلى من حافة طاولة أو منصدة.
٧. لا تقم أبدًا بتشغيل الجهاز في حالة عدم وجود الطعام به.
٨. لا تستخدم الجهاز في حالة تلف المصفاة الدوارة.
٩. لا تضع أصابعك أو أي أشياء أخرى في فتحة العصارة عندما تكون قيد التشغيل. إذا انحسر الطعام في الفتحة، فاستخدم دافع الطعام أو قطعة أخرى من الفاكهة أو الخضار لدفعها لأسفل. عندما لا تتمكن من فعل ذلك، قم بإيقاف تشغيل المحرك وفك العصارة لإخراج الطعام المتبقي.
١٠. لا تدفع الطعام إلى داخل الوعاء القمعي بيدك، أو بالمعلقة، أو بأعواد الطعام، أو المشبك وما إلى ذلك، ولكن استخدم دافع الطعام عندما يكون الجهاز متصلًا بمصدر الكهرباء.
١١. تأكد دائمًا من إحكام تثبيت غطاء العصارة في مكانه قبل تشغيل المحرك. لا تقم بفك المشابك أثناء التشغيل..
١٢. الشفرة حادة - استخدم دائمًا دافع الطعام.
١٣. تجنب ملامسة الأجزاء المتحركة.
١٤. عند استخدام العصارة، تأكد من أن مفتاح التشغيل على الوضع "0" بعد كل مرة تستخدم فيها العصارة. تأكد من توقف المحرك تمامًا قبل فكها.
١٥. لا تغمر وحدة المحرك في المياه أو في السوائل الأخرى.
١٦. يجب أن تحف كافة الأجزاء القابلة للفصل تمامًا بعد التنظيف، ثم قم بتركيبها بالجهاز للاستخدام التالي.
١٧. إن مراقبة الجهاز عن كثب أمرًا ضروريًا في حالة استخدام الأطفال لأي جهاز أو استخدامه بالقرب منهم.
١٨. احذر من الإصابة المحتملة نتيجة سوء الاستخدام.
١٩. في حالة تلف السلك الكهربائي، فيجب أن تستبدله الشركة المصنعة، أو مركز خدمة العملاء أو المختصين لتفادي المخاطر.
٢٠. قم دائمًا بفصل العصارة من مصدر الكهرباء في حالة تركها دون رقابة وقبل تركيب وفك الأجزاء أو التنظيف.
٢١. لا يمكن للأطفال استخدام هذا الجهاز. احتفظ بالجهاز والسلك بعيدًا عن متناول الأطفال.
٢٢. يمكن للأشخاص ذوي القدرات البدنية، أو الحسية أو العقلية المنخفضة أو من تنقصهم

- الخبرة أو المعرفة استخدام هذا الجهاز، إذا كانوا تحت إشراف أو إذا حصلوا على تعليمات بشأن استخدام الجهاز بطريقة آمنة وإذا أدركوا المخاطر التي ينطوي عليها استخدام الجهاز.
٢٣. يجب ألا يعبث الأطفال بالجهاز.
٢٤. لا تستخدم الجهاز خارج المنزل.
٢٥. احتفظ بهذه التعليمات.

تعرف على الأجزاء الخاصة بعصارتك

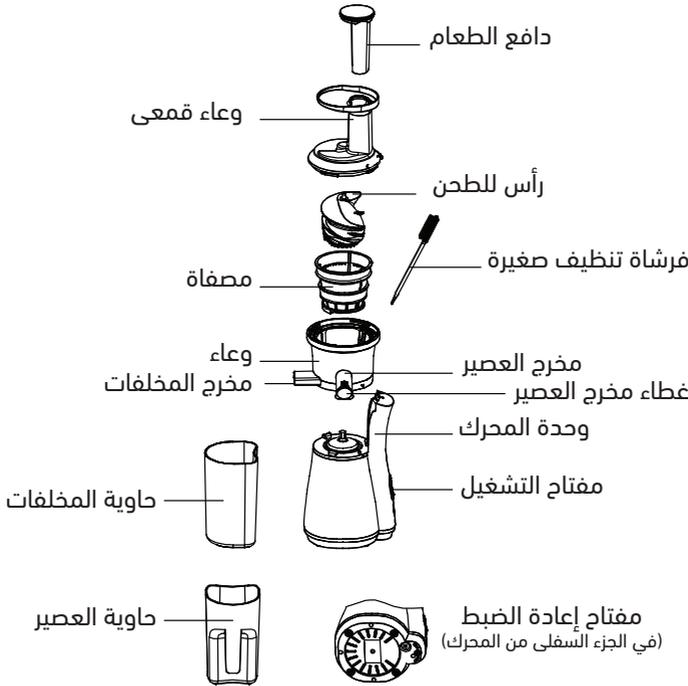

خصائص العصارة

يعد العصر باستخدام العصارة منخفضة السرعة نظامًا فريدًا حيث تحصل على العصير الطازج نتيجة الضغط بدلًا من الطحن. تقوم العصارة البطيئة بالعصر بدلًا من الطحن مما يسمح للعصير بالحفاظ على لونه النقي، وطعمه الطبيعي، والعناصر الغذائية والفيتامينات. يتدفق العصير في كوب العصير من فوهة العصير، وسيستخرج اللب من صنوبر إخراج اللب ويُجمع في حاوية اللب. عند استخدام العصارة، يجب تركيب وعاء اللب ووعاء العصير في مكانهما الصحيح. سيتم توضيح التفاصيل فيما يلي.

استخدام العصارة لأول مرة


١. قم بإخراج الجهاز من العبوة وانزع التغليف وضع كافة الأجزاء على سطح أفقي.
 ٢. اغمر كافة الأجزاء القابلة للفصل والملحقات في الماء الدافئ والصابون واشطفها وجففها. ولكن لا تقم أبدًا بغمر وحدة المحرك في الماء للتنظيف لمنع خطر التعرض لصدمة كهربائية. ملحوظة: يمكن تنظيف المصفاة بالكامل بفرشاة التنظيف الصغيرة.
 ٣. ستجد طريقة التركيب الصحيحة بالتفصيل في الأقسام أدناه.
- قبل تركيب العصارة، تأكد من فصل سلك الكهرباء من مصدر الكهرباء وأن ومفتاح التشغيل على الوضع "0".

ملاحظات قبل الاستخدام

١. قم بإعداد كافة الأطعمة المطلوبة عصرها وفقًا لخصائصها - أطعمة ذات ألياف صلبة - يجب تقطيع الأطعمة ذات الألياف الصلبة إلى شرائح بطول ٣ ~ ٥ سم وسماك ١,٥ ~ ٢ سم. - الخضروات الورقية والأطعمة ذات الألياف الطويلة والصلبة (مثل الكرفس، والأعشاب البرية والكرنب وما إلى ذلك) - اقطع سيقان الأطعمة إلى شرائح بطول ٣ ~ ٥ سم ثم لف أوراق الأطعمة جيدًا. - يجب حفر الثمار ذات النواة الصلبة. يجب عدم وضع نواة الخوخ، والبرقوق، والمانجو، والمشمش والعناب في الوعاء القمعي لتجنب حدوث أي أعطال. - يجب تقشير الأطعمة ذات القشرة السميكة أو الصلبة قبل وضعها في العصارة لعصرها. - يمكن فقط عصر الأطعمة المجمدة بعد إذابة التجمد. لا تستخدم الثلج أبدًا. - لا تقم أبدًا بعصر الأطعمة التي تحتوي على نسبة عالية من الزيوت النباتية أو الحيوانية باستخدام هذه العصارة لتجنب فساد وتلف رأس الطحن.
 ٢. لا تضع أبدًا قصب السكر، أو جوز الهند، أو الكدزو أو الحبوب في هذه العصارة للعصر دون نقعها في الماء (مثل الفول والأرز).
 ٣. لا تضع الكثير من الأطعمة في العصارة كل مرة، لذلك، يجب وضع الأطعمة ذات الرطوبة الأقل والألياف الصلبة في الوعاء القمعي بعد تقطيعها إلى شرائح.
 ٤. قم بتثبيت اللوحة العازلة جيدًا في مكانها.
- ثبت اللوحة العازلة جيدًا في مخرج المخلفات بعد كل مرة تنتهي فيها من التنظيف.

تركيب عصارتك البطيئة


١. قم أولاً بتركيب الوعاء بوحدة المحرك باتباع ما يلي:
قم بمحاذاة الرمز " | " (الرمز الموجود على اليسار) على الوعاء مع الرمز "▲" الموجود على وحدة المحرك وادفع الوعاء للأسفل (انظر الشكل ١) ثم لف الوعاء في اتجاه عقارب الساعة إلى وضع القفل " | " (الرمز على اليمين) بحيث يمكن إحكام تثبيت الوعاء بإحكام على وحدة المحرك. تأكد من تركيب الوعاء في مكانه الصحيح وإلا فلن يعمل الجهاز. وبالإضافة إلى ذلك، وقبل التشغيل، يرجى التأكد من تثبيت اللوحة العازلة جيدًا في مخرج المخلفات (انظر الشكل ٢).

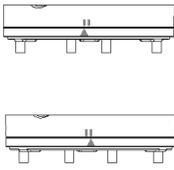

الشكل ١



الشكل ٢

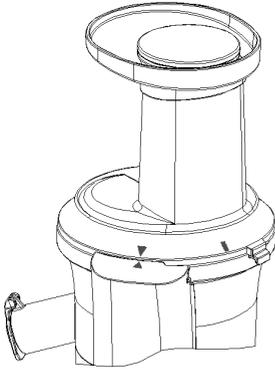

٢. ثم ثبت المصفاة في فرشاة التنظيف الدوارة، ثم وازي الرمز "▲" الموجود على المصفاة مع الرمز "▲" الموجود على وحدة المحرك ثم ادفع المصفاة لأسفل. تأكد من تثبيت المصفاة جيداً في الوعاء.

٣. ثم ثبت رأس الطحن في الوعاء. تأكد من أن رأس الطحن مغطاه بمحور وحدة المحرك.

٤. أخيراً، قم بتثبيت المصفاة في الوعاء بشكل صحيح. أولاً، وازي الرمز "▲" الموجود على المصفاة مع الرمز "▲" الموجود على وحدة المحرك ثم لف المصفاة في اتجاه عقارب الساعة حتى يتوازي الرمز "▲" الموجود على المصفاة مع الرمز "▲" الموجود على وحدة المحرك (انظر الشكل ٣). تأكد من تثبيت المصفاة في مكانها الصحيح وإلا فلن يعمل الجهاز.

٥. ضع وعاء العصير أسفل مخرج العصير وحاوية المخلفات أسفل مخرج المخلفات. الآن، العصارة جاهزة للتشغيل.

استخدام العصارة الخاص بك

١. قبل توصيل سلك الكهرباء بالآخذ، تأكد من أن مفتاح التشغيل في الوضع "0"، وأن مفتاح التشغيل به ثلاثة إعدادات: "—" والتي تشير إلى وضع التشغيل "ON"، اضغط على مفتاح التشغيل على الوضع "—" لتنشيط المحرك والبدء في عمل العصير؛ وتشير "0" إلى وضع إيقاف التشغيل "off"، اضغط على مفتاح التشغيل على الوضع "0" لإيقاف تشغيل الجهاز؛ وتعني "R" الدوران العكسي، والذي يستخدم فقط عند وجود شيء عالق وتحتاج إلى إزالته.

٢. تأكد من وضع حاوية العصير وحاوية المخلفات في مكانهم.

٣. قم بتقطيع الفواكه والخضروات إلى قطع أصغر. على سبيل المثال، يجب تقطيع الجزر إلى شرائح رفيعة بحجم ١٥ مم × ١٥ مم قبل وضعها في الجهاز.
ملحوظة:

(أ) يرجى إزالة أي بذور صلبة قبل العصر.

(ب) لا ينصح بعصر جوز الهند أو الأطعمة الصلبة المماثلة، لأن ذلك قد يؤدي إلى تلف المحرك.

(ج) لا ينصح بعصر الفاكهة الصلبة أو الخضروات الغنية بالألياف والنشا مثل قصب السكر.

(د) يجب إزالة القشر والنوى من البرتقال، والليمون، والجريب فروت والبطيخ.

٤. قم بإسقاط الفاكهة أو الخضروات المجهزة في الوعاء القمعي وادفع الفاكهة برفق إلى أسفل إلى رأس الطحن باستخدام دفع الطعام.
٥. اضغط على مفتاح التشغيل على الوضع "ON" ليبدأ الجهاز في العمل. بعد بضع دقائق، سيتدفق العصير.

تحذير: لا تقم بالتشغيل مسبقًا قبل إدخال الطعام ولا تقم بالتشغيل والوعاء فارغًا.
تحذير: لا تضع أصابعك أو أي أجسام غريبة أخرى في فتحة التغذية عندما يكون الجهاز قيد التشغيل.

٦. أثناء التشغيل، إذا انحسر الطعام بالعصارة ولا يمكن تشغيلها، يرجى أولاً الضغط على مفتاح التشغيل إلى الوضع "0" ثم قم بإمالة وحدة المحرك والضغط على مفتاح إعادة الضبط في الجزء السفلي من وحدة المحرك. بعد ذلك، اضغط مع الاستمرار في الضغط على مفتاح التشغيل إلى الوضع "R" ليضع ثوان ثم حاول التشغيل مرة أخرى. عندما لا تعمل خاصية التشغيل العكسي، أوقف تشغيل الجهاز وأعد التركيب باتباع الإرشادات الواردة. بعد إعادة التركيب، يرجى محاولة تشغيل الجهاز.

٧. عند امتلاء حاوية العصير (السعة القصوى ٤٠٠ مل) أو الانتهاء من استخلاص العصير من الطعام، أدر مفتاح التشغيل إلى الوضع "0" وقم بإفراغ حاوية العصير وحاوية المخلفات قبل الاستمرار في استخراج العصير.

ملحوظة: يجب ألا يتجاوز أقصى وقت للتشغيل ١٥ دقيقة كل مرة. يجب الحفاظ على وقت راحة لا يقل عن ٣٠ دقيقة بين كل دورتين متتاليتين.

ملحوظة: لا تدخل الكثير من الطعام لاستخراج العصير كل مرة. أثناء التشغيل، بمجرد امتلاء حاوية العصير، يجب عليك إيقاف تشغيل الجهاز وتفريغ حاوية المخلفات قبل الدورة التالية.
ملحوظة: أثناء التشغيل، إذا تم فصل مفتاح التعشيق بين المصفاة ووحدة المحرك، فسيتموقف المحرك لمنع الخطر.

٨. بعد الانتهاء، استمتع بالعصير في الحال للحصول على أفضل مذاق. يجب تخزين أي عصير غير مستخدم في الثلاجة.

التنظيف والصيانة

١. افصل الجهاز وانتظر حتى يبرد تمامًا قبل التنظيف.
٢. لفك العصارة وجعل تنظيفها أكثر سهولة، قم بتشغيل العصارة بدون تحميلها لمدة ٣٠ ثانية تقريبًا بعد إخراج بقايا الطعام. إذا لم تتمكن من فصل الوعاء القمعي بسهولة، يرجى اتباع العملية التالية وتكرارها لمرتين أو ثلاث مرات: Reverse عكسي – OFF إيقاف التشغيل – ON التشغيل، وفي نفس الوقت، امسك الوعاء القمعي ولفه لفصله. بعد الانتهاء من استخلاص العصير، اسكب بعض الماء في الوعاء القمعي لتنظيفه حتى يسهل فصله.
٣. افتح قفل الوعاء القمعي عن طريق لفة عكس اتجاه عقارب الساعة ثم فكه.
٤. افصل رأس الطحن، والمصفاة وفرشاة التنظيف الدوارة بالترتيب.
٥. لف الوعاء عكس اتجاه عقارب الساعة ثم فكه.
٦. قم بإفراغ حاوية المخلفات، ثم قم بتنظيف الوعاء القمعي، ورأس الطحن، والمصفاة، وفرشاة التنظيف الدوارة، والوعاء وحاوية المخلفات أسفل الماء الجاري. يمكن استخدام فرشاة التنظيف الصغيرة للمصفاة لتنظيف أفضل.
- تحذير: المصفاة حادة، لذا تعامل معها بحذر أثناء التنظيف.
- تحذير: لا تستخدم الإسفنج المعدن للتنظيف، سوف يتلف الجهاز.
٧. إذا كنت بحاجة إلى تنظيف مخرج المخلفات جيدًا، فيجب عليك أولاً سحب اللوحة العازلة من مخرج المخلفات ثم تنظيفها بالكامل بفرشاة التنظيف الصغيرة.
٨. امسح الجزء الخارجي من وحدة المحرك بقطعة قماش رطبة. لا تغمر وحدة المحرك في الماء أبدًا.
٩. جفف كافة الأجزاء وقم بتركيبها جيدًا ثم قم بتخزين الجهاز في مكان جاف. يمكن تخزين حاوية العصير في حاوية المخلفات.

التخلص من الجهاز الصديق للبيئة



يمكنك المساعدة في حماية البيئة!
يرجى تذكر احترام القوانين المحلية: تُسلم الأجهزة الكهربائية
التي لا تعمل إلى مركز التخلص من النفايات المناسب.

Environment friendly disposal

You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal center.



Note: The max operation time per time shall not exceed 15 minutes. Minimum 30 minutes rest time must be maintained between continuous two cycles.

Note: Do not insert too much food to extract per time. During operation, once the juice container is full, you must stop the appliance and empty the residue container before next cycle.

Note: During operation, if the interlock switch between the hopper and the motor unit is disconnected, the motor will stop to prevent from danger.

7. After finish, enjoy your juice in time for best taste. Any unused juice should be stored in the refrigerator.

Cleaning And Maintenance

1. Unplug the appliance and wait it completely cool down before cleaning.
2. In order to detach & clean more easily, run the juicer without load for about 30 seconds after removing the residue. If the hopper cannot be detached easily, please follow and repeat the following operation for two or three times: Reverse—OFF—ON, at the same time, hold and rotate the hopper to detach it. After finish extracting juice, pour some water into the hopper to clean it so that it will be easier to be detached.
3. Unlock the hopper by turning it in anti-clockwise and then remove it.
4. Detach the grinding head, strainer and rotary cleaning brush in sequence.
5. Rotate the jar anticlockwise and then remove the jar.
6. Empty the residue container, and then clean the hopper, grinding head, strainer, rotary cleaning brush, jar and residue container under running water. The small cleaning brush can be used for the strainer for better cleaning.
Caution: Strainer is sharp, so handle carefully during cleaning
Caution: Do not use metal sponge to clean, it will damage the machine.
7. If you need to clean the residue outlet thoroughly, you shall firstly pull the buffer plate out of the residue outlet and then clean it completely with the small cleaning brush.
8. Wipe the outside of motor unit with damp cloth. Never immerse the motor unit in water.
9. Dry all parts and assemble all parts well and then store the appliance in a dry place. The juice container can be stored in the residue container.

Using Your Juicer

1. Before attaching the power cord into the outlet, make sure the power switch is in the “O” position, the power switch has three settings: “—” indicates “ON”, press the power switch to “—” position to activate the motor and start making juice; “O” indicates “off” position, press the power switch to “O” position to turn off the machine; “R” means reverse rotation, which is only used when something is stuck and you need to unclog.
2. Make sure the juice container and the residue container are placed in position.
3. Cut fruits and vegetables into smaller pieces. For example, the carrots shall be cut into thin slices with size of 15mm×15mm before being put into the machine.

NOTE:

- A) Please remove any hard seeds before juicing.
 - B) It is not recommended to process coconuts or similar hard foodstuffs, since this may damage the motor.
 - C) It is not recommended to process hard fruit or vegetable rich in fiber and starch, such as sugarcane.
 - D) The peel and pits should be removed from oranges, lemons, grapefruits and melons.
4. Drop the prepared fruits or vegetables into the hopper and gently push the fruit down into the grinding head using the food pusher.
 5. Press the power switch to the “ON” position and the appliance starts to work. After few minutes, the juice flow out.
Caution: Do not pre-operate before inputting materials or do not operate with an empty jar.
Caution: Do not put your fingers or other foreign objects into the feeding opening while it is in operation.
 6. During operation, if the machine is stuck and not operable, please firstly press the power switch to “O” position and then tilt the motor unit and press the reset switch on the bottom of the motor unit. After it, press and hold the power switch to the “R” position for few seconds then try operating again. When reverse function cannot work, turn off the machine and reassemble following the instructions given. After reassembly please try turning on the machine.
 7. When the juice container is full (the max capacity is 400ml) or the food has been finished extracting, turn the power switch to the “O” position and empty the juice container and residue container before continuing extracting.

Assemble Your Slow Juicer

1. Firstly assemble the jar onto the motor unit by following the operation as below:

Make the symbol “|” (the symbol on the left) on the jar aligns with the symbol “▲” on the motor unit and push the jar downwards (See Fig.1) and then rotate the jar clockwise to the lock position “▲” (the symbol on the right) so that the jar can be locked on the motor unit tightly. Make sure the jar is assembled in position properly otherwise the appliance will not operate. Besides, before operating, please make sure that the buffer plate must be assembled well in the residue outlet (See Fig.2).

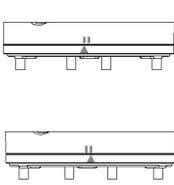


Fig.1

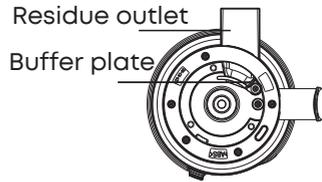



Fig.2

2. Then place the strainer into the rotary cleaning brush, and then make the symbol “▲” on the strainer align with the symbol “▲” on the motor unit and then push the strainer downwards. Make sure the strainer is assembled well into the jar.

3. And then put the grinding head into the jar. Make sure the grinding head is covered into the axis of the motor unit.

4. Finally, assemble the hopper on the jar correctly. Firstly make the symbol “▲” on the hopper align with the symbol “▲” on the motor unit and then rotate the hopper clockwise until the symbol “|” on the hopper aligns with the symbol “ ” on the motor unit (See Fig.3). Make sure the hopper is assembled in position properly otherwise the appliance will not operate.

5. Place your juice container below the juice outlet and residue container below the residue outlet. Until now, the Juicer is ready for operating.

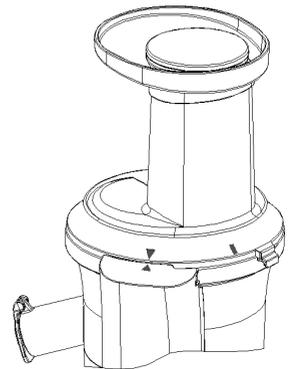

For The Initial Use

1. Unpack the appliance and place all parts on a horizontal surface.
2. Immerse all the detachable parts and accessories in warm soapy water and rinse them and dry. But never immerse motor unit in water for cleaning to prevent the risk of electric shock.

NOTE: The strainer can be cleaned completely by the small cleaning brush.

3. The correct assembly way will be described for details in below sections.

Before assembling, be sure the power cord is unplugged from the power outlet and the power switch is on the “O” position.

NOTES BEFORE USE

1- Prepare all the required materials according to the characteristics of them

- Materials with hard fibre

The materials with hard fibre shall be cut into slices 3~5cm in length and 1.5~2cm in thickness.

- Leaf vegetables and materials with long & hard fibre (such as celery, wildcelery herb and collard etc.)

Cut the stems of the materials into slices 3~5cm in length and then roll up the leaves of the materials well.

- The fruit with hard core shall be pitted. The cores of peach, plum, mango, apricot and jujube shall not put into the hopper to avoid any malfunction.

- The materials with thick or hard peel shall be peeled before being put into the juicer for processing.

- The frozen materials can just be used after being defrosted. Never use ice.

- Never process the materials with high vegetable oil or animal oil with this juicer to avoid the degradation and damage of the grinding head

2- Never put sugarcane, coconut, kudzu or cereal without being soaked with water (e.g. bean, rice) into this juicer for processing.

3-Do not put overmuch materials in the juicer each time, therefore, the materials with less moisture and hard fibre shall be put into the hopper after being cut into slices.

4-Assemble the buffer plate well in position

The buffer plate shall be assembled well in the residue outlet after finish cleaning each time.

manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

20. Always disconnect the juicer from the supply if it is left unattended and before assembling, disassembling or cleaning.

21. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.


22. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

23. Children shall not play with the appliance.

24. Do not use outdoors.

25. Save these instructions.

Know Your Juicer

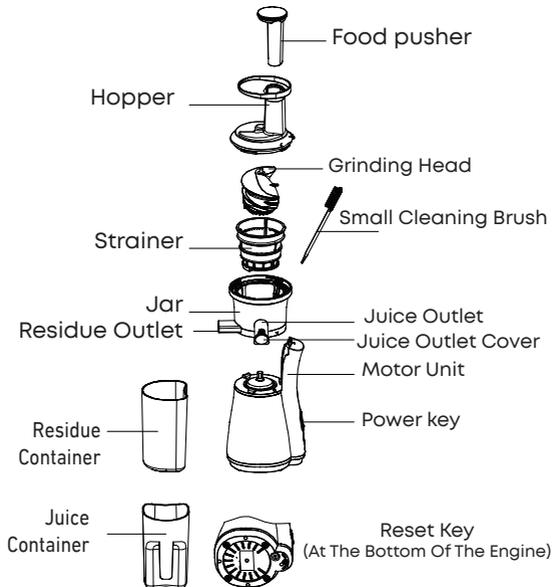

Function Description

The low speed juicing juicer is a unique system where fresh juice comes from squeezing rather than grinding. The slow juicer squeezes instead of grinding which allows the juice to maintain its pure color, natural taste, nutrients and vitamins. The juice will flow in your juice cup from the juice spout, and the pulp will be ejected from pulp ejection spout and be collected by pulp container. When using the juicer, the pulp container and juice container must be assembled in position. The details will be described in the following.

Important Safeguards

When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
4. The use of attachment, including sieve, top lid, food pusher, jar not recommended or sold by manufacture may cause fire, electric shock or injury.
5. Do not place on or near a hot gas or electric burner or in a heated oven.
6. Do not let cord hang over edge of table or counter.
7. Never run the appliance under no food condition.
8. Do not use the appliance if the rotating sieve is damaged.
9. Do not put your fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in opening, use food pusher or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.
10. Do not push the food with hand, spoon, chopstick and clip etc. other than food pusher into the hopper when the appliance is connected to power source.
11. Always make sure juicer cover is clamped securely in place before motor is turned on. Do not unfasten clamps while juicer is in operation.
12. Sharp Blade-Always use food pusher.
13. Avoid contacting moving parts.
14. For the juicer, make sure the switch is on "O" position after each use of your juicer. Make sure the motor stops completely before disassembling.
15. Do not immerse the Motor Unit into water or other liquids.
16. All detachable parts must be dry completely after cleaning, and then assemble them into appliance for next using.
17. Close supervision is necessary when any appliance is used by or near children.
18. Warn of potential injury from misuse.
19. If the supply cord is damaged, it must be replaced by the

TORNADO

Model
TSJ-6001



Thanks for Choosing Tornado
Slow Juicer

ELARABY

19319  elarabygroup.com
 **TORNADO**

Slow Juicer
OWNER'S MANUAL

TORNADO is A Registered Trademark Of El-araby Company.