

# TORNADO

موديل  
TPC-700



شكراً لإختيارك صانع البان كيك - تورنيدو

صانع البان كيك  
دليل التشغيل

ELARABY

19319  elarabygroup.com  
TORNADO

## معلومات تقنية

الموديل : PM9٤٠١K-CB الفولت : ٢٤٠V-AC٢٢٠

التردد : ٦٠-٥٠ هرتز القوة : ٧٠٠ واط

## إجراءات حماية مهمة

عند استخدام هذا الجهاز الكهربائي ، يجب دائمًا اتباع احتياطات السلامة الأساسية على النحو التالي بما في ذلك ما يلي:

١- يمكن استخدام هذا الجهاز من قبل الأطفال الذين تتراوح أعمارهم بين ٨ سنوات وما فوق والذين يعانون من ضعف القدرات الجسدية أو الحسية أو العقلية أو نقص الخبرة والمعرفة إذا تم منحهم الإشراف أو التعليمات المتعلقة باستخدام الجهاز بطريقة آمنة وفهم المخاطر لا يجوز للأطفال اللعب بالجهاز. لا يجوز للأطفال إجراء التنظيف والصيانة للمستخدم إلا إذا كانوا أكبر من ٨ سنوات وتحت إشرافهم.

٢- لا يُقصد تشغيل هذه الأجهزة عن طريق مؤقت خارجي أو نظام تحكم عن بعد منفصل.

٣- اقرأ جميع التعليمات بعناية

٤- لا تلمس السطح الساخن أو القاعدة التي تم توصيلها بمصدر الطاقة.

٥- لا تغمر السلك أو القابس أو قاعدة الجهاز في الماء أو أي سائل آخر.

٦- الإشراف الدقيق ضروري عند استخدامه من قبل الأطفال أو بالقرب منهم. لا تستخدم الجهاز بالقرب من أو أسفل الستائر أو المواد الأخرى القابلة للاحتراق .

٧- افصل الجهاز في حالة عدم استخدامه أو قبل التنظيف أو وضع الأجزاء أو نزعها .

٨- لا تقم بتشغيل أي جهاز به سلك أو قابس تالف ، أو بعد عطل. في حالة تلف سلكه الرئيسي ، يجب إعادته إلى الشركة المصنعة أو أقرب مرفق خدمة أو وكيل معتمد للفحص أو الإصلاح أو التعديل الكهربائي أو الميكانيكي.

٩- لا تدع السلك معلقًا على حافة الطاولة أو المنضدة أو الحافة الحادة أو تلمس لوح التسخين

١٠- لا تضع الجهاز بالقرب من غاز قابل للانفجار أو موقد كهربائي أو في فرن ساخن.

١١- لا تستخدم الجهاز في غير الأغراض المخصصة له.

١٢- تأكد من أن الجهد الكهربائي لمأخذ الحائط يتوافق مع الجهد المذكور على لوحة التصنيف الخاصة بصانع الدونات

١٣- يجب عدم طهي الأطعمة كبيرة الحجم ، والأطعمة قليلة الدسم في هذا الجهاز. قد تتسبب في نشوب حريق أو حدوث صدمة كهربائية


١٤- لا تحاول إخراج الطعام أثناء عمل صانع الدونات. فقد يتسبب ذلك في إصابة أو تلف .

١٥- لا تستخدم مقبس طاقة تالفا .

١٦- يجب إجراء أي فحص للجهاز أو إصلاحه أو تعديله بواسطة وكيل الخدمة المعتمد.


## استخدام الأسرة ( المنزلى ) فقط

- تعرف على صانع الفطائر الخاص بك

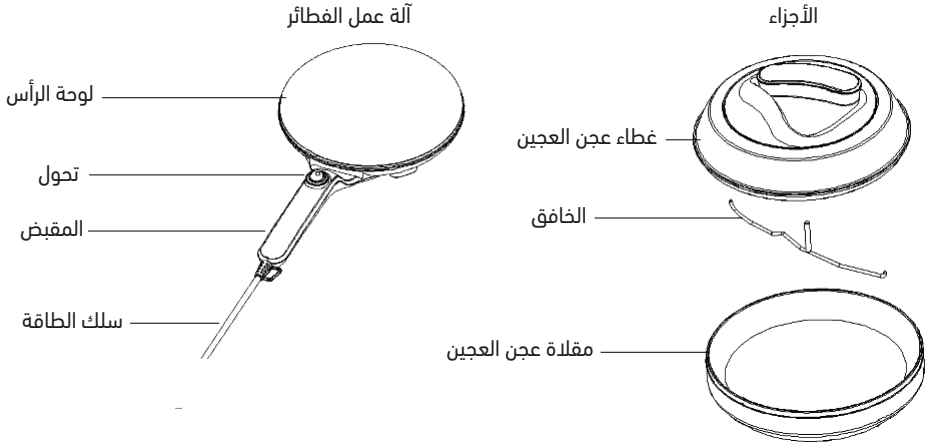

## التشغيل



التثبيت: كما هو موضح في الشكل ، قم بمحاذاة قضيب التحريك بالفتحة المستديرة في منتصف غطاء الوجه و قم بتثبيتته في مكانه.

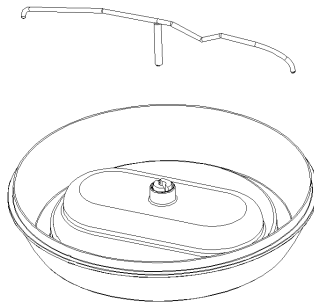

## التشغيل



### ٢. عجّين:

كما هو مبين في الشكل أدناه ، ضعي المكونات والماء أولاً في إناء العجن ، ثم غطي غطاء العجن بقضيب التحريك. لف المقبض باليد لبدء العجن. انظر من الداخل من خلال الغطاء الشفاف ، واخلطه بالتساوي. بعد أن تصبح جاهزاً ، يمكنك إزالة غطاء العجن واستخدام المعجون الجاهز بعد ذلك

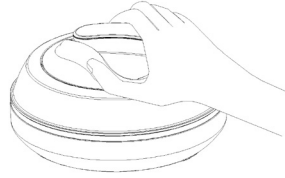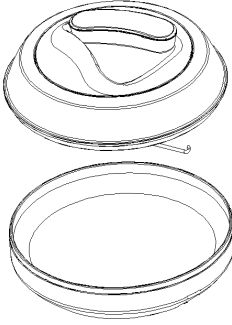

### ٣. بداية التسكين (التركيب )

قم بتوصيل الوحدة الرئيسية ، واضغط على المفتاح الموجود في الوحدة الرئيسية ، وسيضيء ضوء المؤشر الموجود على المفتاح ، ويبدأ العمل

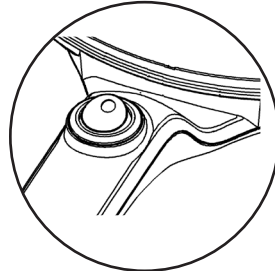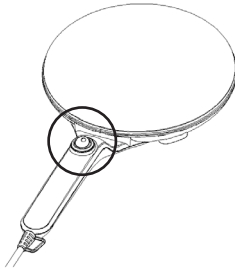

كما هو مبين في الشكل أدناه ، عندما يتم تسخين المضيف إلى درجة الحرارة المحددة ، يتم إيقاف تشغيل ضوء المؤشر الموجود على المفتاح. في هذا الوقت ، أمسك بمقبض العائل ، ثم ضع سطح التسخين للمضيف لأسفل ، ثم ضعه برفق على لوحة الخلط لإلصاق العجينة عليه. (انتبه إلى العملية يدويًا للضغط برفق أفقيًا ، وتحقق من ارتفاع العجينة ، ولا تدع العجينة تفيض على المقلاة) ، خذها لمدة ١-٢ ثانية ، ضع سطح التسخين للمضيف فوق الطاولة وانتظر السطح اخبز العجين في فطيرة. انتبه إلى لون الفطيرة. إذا كان ذلك مناسباً ، يمكنك التقاط الوحدة الرئيسية ووضع سطح الحرارة لأسفل وترك الفطيرة تسقط في الطبق المعد مسبقاً. إذا كانت اللزوجة أقوى من أن تتساقط ، يمكنك هزها برفق ، أو استخدام شوكة لسحب الجزء العالق ببطء من حافة الفطيرة.

## للاستخدام الأول

- ١) عند الاستخدام لأول مرة ، قد يكون لهذا المنتج القليل من الدخان والرائحة. هذا أمر طبيعي وسيختفي قريبًا. تأكد من أن المنتج جيد التهوية.
- ٢) يرجى التحقق مما إذا كانت جميع الأجزاء والملحقات سليمة وغير تالفة .
- ٣) نظف جميع الأجزاء وفقا لفصل ( التنظيف و الصيانة ).
- ٤) يتم تجفيف الأجزاء وتجميعها جيدًا ، والمنتج جاهز للاستخدام.

## التنظيف والصيانة

- افصل مصدر الطاقة واتركه يبرد قبل التنظيف
- ١) الوحدة الرئيسية: امسح دلو الخبز من الداخل والخارج بقطعة قماش مبللة. يرجى الحرص على عدم استخدام أشياء حادة أو كاشطة لحماية الطلاء غير اللاصق. يجب أن يجف تمامًا قبل الاستخدام .
  - ٢) صحن عجن وغطاء عجن وقضيب تقليب: يمكنك الشطف بالماء مباشرة والممسح بقطعة قماش قطنية رطبة. يوصى بعدم نقع غطاء العجين في الماء. إذا دخلت الماء عن طريق الخطأ ، يمكنك قلب غطاء العجين للخلف ووضعه على سطح الطاولة وانتظر حتى يتم تنظيف الماء.
  - ٣) قبل تعبئة المنتج وتخزينه ، تأكد من أنه بارد تمامًا ونظيفًا وجافًا. قم بتركيب قضيب التحريك على غطاء العجن وقم بتغطيته بوعاء العجن. مقبض الوحدة الرئيسية به فتحات معلقة ويمكن تعليقه على الحائط .
- نصائح:** أضيفي ملعقة صغيرة من زيت الطهي عند صنع الكيك ، مما سيسهل سقوط البان كيك.

## التخلص من الجهاز الصديق للبيئة



يمكنك المساعدة في حماية البيئة!  
يرجى تذكر احترام القوانين المحلية: تُسلم الأجهزة الكهربائية  
التي لا تعمل إلى مركز التخلص من النفايات المناسب.



## Cleaning and Maintenance

and place it on the table top and wait for the water to clean.

3. Before packing and storing the product, make sure it is completely cooled, clean and dry. Install the stirring rod on the kneading cover and cover it with the kneading pan. The handle of the main unit has hanging holes and can be hung on the wall.

Tips: Add a small spoonful of cooking oil when making the cake, which will make the pancake easier to fall off.

## Environment friendly disposal


You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.



## Operation

unit, put the heat surface down, and let the pancake fall into the pre-prepared dish. If the viscosity is too strong to fall off, you can shake it gently , Or use fork to slowly pull away the stuck part from the edge of the pancake.

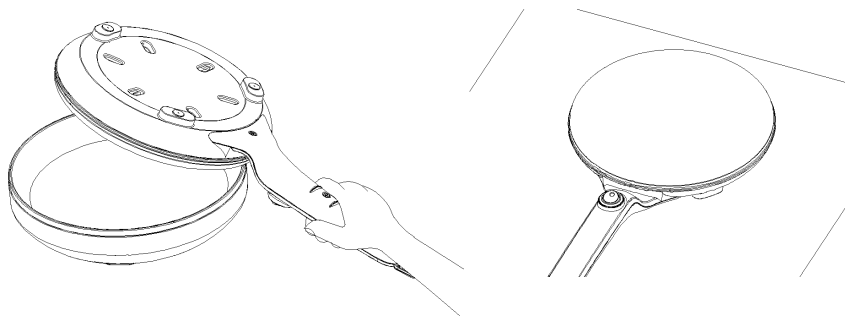

## FOR FIRST USE

When using for the first time, this product may have a little smoke and smell. This is normal and will disappear soon. Ensure that the product is well ventilated.

2. Please check whether all parts and accessories are intact and undamaged.

3. Clean all parts according to chapter «V. CLEANING AND MAINTENANCE».

4. The parts are thoroughly dried and assembled, and the product is ready for use.

## Cleaning and Maintenance

Disconnect the power supply and allow it to cool down before cleaning.

1. Main unit: Wipe the inside and outside of the bread bucket with a damp cloth. Please be careful not to use sharp or abrasive objects to protect the non-stick coating. It must be completely dry before use.


2. Kneading plate, kneading cover, stirring rod: You can directly rinse with water and wipe carefully with a damp cotton cloth. It is recommended not to soak the dough cover in the water. If you accidentally enter the water, you can turn the dough cover back



## Operation


### 2. Kneading:

As shown in the figure below, first put the ingredients and water into the kneading pan, and then cover the kneading cover with the stirring rod. Turn the handle by hand to start kneading. Look inside through the transparent cover, and mix it evenly. After ready you can remove the dough cover, and use the ready paste then .

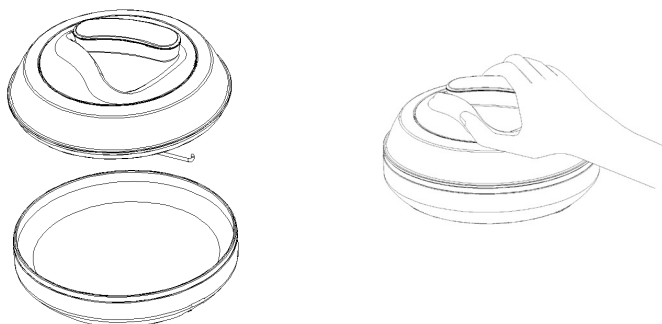

### 3 .Host start:

Plug in the main unit, press the switch on the main unit, the indicator light on the switch will light up, and start to work

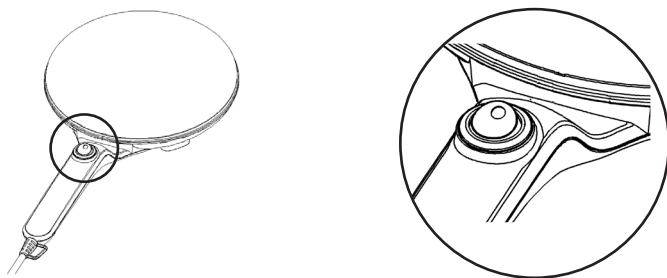

### 4.To make pancakes with viscous paste:


As shown in the figure below, when the host is heated to the set temperature, the indicator light on the switch is off. At this time, grasp the handle of the host, put the heating surface of the host downwards, and gently put it on the mixing plate to stick the paste on it. (Pay attention to the operation by hand to gently press down horizontally, and check the height of the paste , do not let the paste overflow the pan), take it for about 1-2 seconds, put the heating surface of the host up on the table and wait for the surface Bake the dough into a pancake. Pay attention to the color of the pancake. If it is suitable, you can pick up the main

## Important Safeguards

11. Oversize food, low fat food must not be cooked in this appliance. They may cause fire or electric shock.
12. Do not attempt to dislodge food when donut maker is working. It may cause injury or damage.
13. Do not use a damaged power socket
14. Any examination, repair, or adjustment for the appliance should be made by the authorized service agent.


## Household Use Only

### - Know your Pancake Maker

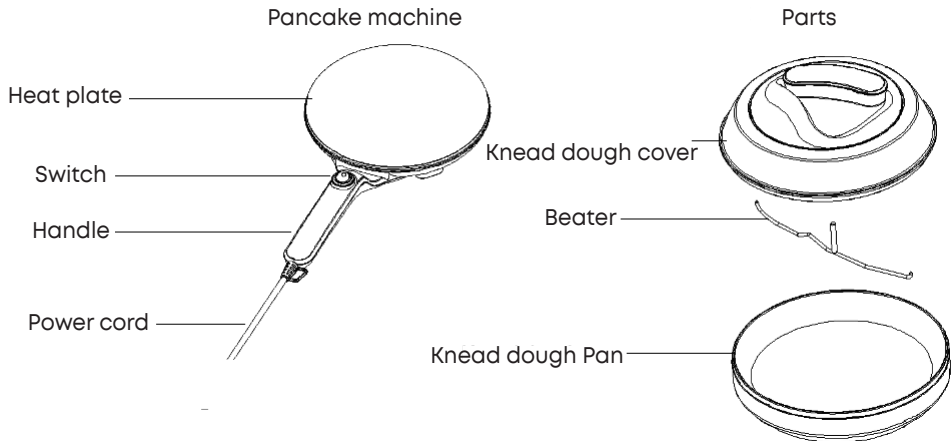

## Operation

1-Installation: As shown in the figure, align the stirring rod to the round hole in the middle of the face cover and install it in place;

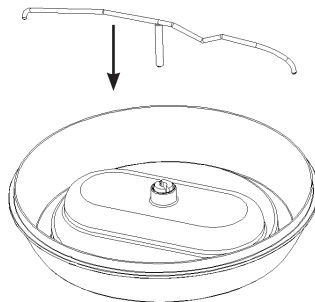

## Technical information

**Mode:** PM9401K-CB    **Rated voltage:** AC220-240V  
**Frequency:** 50-60Hz    **Power:** 700W

## Important Safeguards

When using this electrical appliance, basic safety precautions as follows should always be followed including the following:

- 1- This appliance can be used by children aged form 8 years and above and peresons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- 2- That appliances are not intended to be operated by means of an external timer or separate remote-control system.
- 3- Read all instructions carefully.
- 4- Do not touch hot surface or the base that has been connected into power supply.
- 5- Do not immerse cord, plug, or the appliance base into water or any other liquid.
- 6- Close supervision is necessary when it is used by or near children. Don't use the appliance near or below curtains or other combustible materials.
- 7- Unplug the appliance when not in use or before cleaning,putting on or taking off parts .
- 8- Do not operate any appliance with a damaged cord or plug, or after malfunction. If its main cord is damaged, it must be returned to the manufacturer or the nearest authorized service facility or agent for examination, repair or electrical or mechanical adjustment.
- 9- Do not let the cord hang over edge of table or counter, or sharp edge, or touch hotplate.
- 10- Do not place the appliance near explosive gas or an electric cooker, or in a heated oven.
- 11- Do not use the appliance for other than its intended use.
10. Make sure that the voltage of the wall outlet corresponds with that stated on the rating plate of the donut maker.

# TORNADO

Model  
TPC-700



Thanks for Choosing Tornado  
Pancake Maker

**ELARABY**

**19319**  [elarabygroup.com](http://elarabygroup.com)  
 **TORNADO**